

Operating Instructions

Toaster / Salamander

Model „BUSSO T 1“ and „BUSSO T 2“
Order no. 172-1200 172-1210



General notes

- Carefully read these operating instructions through as they contain important information.
- It is advisable to keep the operating instructions in a place where you have them always ready to hand. Should you pass the salamander on to a third party, this instruction manual must be handed on.
- As soon as you have unpacked the salamander, check whether everything is in a faultless condition. Should anything be damaged, do not connect the appliance as such, but inform your dealer.
- The salamander must only be used for the intended purpose. Improper use can cause damages and lead to the loss of the warranty.
- Before you connect the salamander, make sure that the type of current stated on the identification plate corresponds with your mains supply.
- In the case of fault and/or malfunction, pull the plug out of the socket and inform your dealer. He will carry out the repair with original spare parts.
- Please observe the local regulations concerning accident prevention and disposal.
- Before each cleaning, the salamander has to be disconnected from power socket.
- The manufacturer/dealer cannot be made responsible for damages which arise through not observing these operating instructions. Apart from this, if these instructions are not observed, oven safety is no longer guaranteed.

Safety notes

- Wrong operation and inappropriate treatment can lead to disturbances at the appliance.
- Do not touch the plug with wet hands.
- Regularly check the cable. If it is damaged, it must be exchanged by a qualified specialist.
- The cable must not hang over table edges and/or sharp edges. It also must not come into contact with water.
- Do not use the cable to pull out the plug from the socket.
- Only qualified experts may perform repair and maintenance work on the appliance using original replacement and accessory parts. Never attempt to repair the appliance yourself!
- Pull the plug from the plug socket, if you do not use the appliance.
- Place the salamander on a stable, flat and fire-proof surface.
- The appliance must not be placed near to open flame (for example gas ovens) or inflammable materials (p. e. curtains). Always leave 20 cm space on each side.
- The salamander will become hot when in use, be careful when touching.
- Do not leave the salamander unattended while it is in use. Children are not able to realise dangers when handling electric appliances.
- Do not move the salamander while it is in use.
- Before each cleaning, the appliance has to be switched off and the plug has to be pulled out of the socket.

Operation of the Salamander

Before first start-up clean the salamander, as described under „Cleaning”

1. Put the plug into the plug socket.
2. Turn the toggle for the timer on the desired toast duration. The control-lamp lights up and indicates that the salamander is ready for use.
3. As soon as the adjusted time is finished, the salamander will switch off automatically.

Cleaning

- Before cleaning make sure that the appliance has been disconnected from power socket.
- Pull the power plug.
- Let the appliance cool down.
- Brush off the grids carefully.
- Empty the crumb tray and clean it with a warm damp cloth.
- Put the crumb tray back into the salamander.
- Clean the housing with a damp cloth and a mild cleaning agent. Afterwards dry everything carefully.
- Never hose down the salamander with water or place into water.

NOTE

For the disposal of the griddle follow the regulations applicable in your country.

Exploded drawing

