



# Operating Manual

WOW GRILL MINI (444-1000)  
WOW GRILL 400 (444-1005)  
WOW GRILL 800 (444-1010)  
WOW GRILL 1200 (444-1015)



Img. WOWGRILL 800



## TABLE OF CONTENTS

Introduction .....	2
Overview .....	2
Package Contents .....	2
European Norms and EC Directives .....	2
Basic Information .....	3
Safety Symbols .....	3
Safety Instructions .....	4
Connection .....	5
Operation .....	6
Maintenance .....	7
Cleaning .....	7
Recycling and Disposal Information .....	7

## INTRODUCTION

Dear customer,

congratulations on purchasing this SARO WOW GRILL!

Saro's WOW GRILLS are manufactured from AISI 304 stainless steel. Each grill is equipped with one, two or three heating zones. Every heating zone consists of 18 square stainless steel tubes. Each tube contains an independent heating element.

This kind of construction offers unique energy efficiency and guarantees a consistent temperature throughout the whole cooking area. Temperatures up to 320 °C are achieved in no time. With it's innovative and functional design, the WOW GRILL offers a unique solution to your needs.

The grill is easy to setup and simple to use.

Please read the following information and instructions carefully before operating the grill.

We hope you enjoy your new WOW GRILL and that it will give you many years of grilling pleasure!

## OVERVIEW

Model	Dimensions (mm)	Cooking area (mm)	Power (kw)	Food (kg/h)	Connection	Temperature (°C)	Weight (kg)
Mini	415x600x150	370x370	3,4	6	230V - 1Ph.	320	15
400	415x700x150	370x470	4,5	7,5	400V - 3Ph.	320	18
800	795x700x150	770x470	9,0	15	400V - 3Ph.	320	29
1200	1166x700x150	1130x470	13,5	22,5	400V - 3Ph.	320	41

Technical changes reserved!

## PACKAGE CONTENTS

- 1 Professional electrogrill
- 2 Stainess steel scrapers
- 1 Operating manual

## EUROPEAN NORMS AND EC DIRECTIVES

This appliance conforms with the European Directives.  
If requested we provide you with the according declaration of conformity.

Product images are for illustration purpose only and may differ from the actual product.

## BASIC INFORMATION

- Before first use clean the grill thoroughly.
- Keep this instruction manual handy nearby for future reference.
- The manufacturer or dealer can not be held responsible for damages, caused from disregarding this manual. Aside from that the safety of this appliance is not guaranteed anymore.
- When passing on / selling this appliance to a third party, the manuals must be handed over along with the appliance.
- After unpacking the WOW GRILL, make sure that all items, mentioned earlier, are included and everything is in perfect condition. If you discover any damages, do not install the appliance, but contact your dealer.
- Keep the packaging for future use. Only in its original packaging, the item can be transported securely.
- Remove packaging materials, because playing children could cut on it. Plastic bags must be kept out of reach of children.
- If storage of the packaging is not possible, please separate plastic and paper/cardboard. These materials should be disposed responsibly and in conformity with government regulations
- Due to hygienic issues, the grill should be cleaned at least on a daily basis, but also each and every time after the grill has been used, during a day.

## SAFETY SYMBOLS



### **WARNING!**

This symbol indicates a warning of potential serious bodily injury if the instructions are not strictly followed. Please be sure to read and follow all these messages carefully.



### **WARNING: RISK OF ELECTRICAL SHOCK!**

This symbol indicates possible danger to the user from electric voltages, which can result in death, injury or serious damage, if the applicable safety regulations are not followed.



### **WARNING: HOT SURFACE - RISK OF BURNING!**

This symbol indicates the danger of burns due to a hot surface, during operation and after that. Risk of burning!

## SAFETY INSTRUCTIONS

- Read this manual carefully and operate with care.
- Wrong use may cause damages to the appliance and can cause severe injuries to the operator.
- Always stick to the accident prevention and safety regulations and general safety regulations valid for your working environment.
- Never operate the device unattended!
- Inside, only use the device under an extractor hood.
- Always care for enough fresh air when using this device.
- Make sure the device is always placed on a stable, flat, dry, heat resistant and slip-free surface.
- Don't move the device during operation.
- Don't put the device on a hot surface.
- Avoid letting the power cord rub against any sharp edges.
- Avoid the power cords lying across any high traffic areas where people might trip over them.
- Regularly check the power cord. If the power cord has been damaged it has to be replaced by professional and qualified personnel only.
- Never leave the device stay unattended during operation. Take special care if children are present. Children do not know the danger of electric devices nor the danger of appliances that get hot.
- Protect the device from moisture.
- Don't operate the device outdoors, when it is raining!
- Do not use a water jet, spray or splash water to clean the device!
- If necessary contact a person who is authorised to repair the device.
- This device must only be operated by persons who are trained accordingly.
- This device must not be operated by children and persons who are not able to operate the device safely due to their physical, sensory or mental abilities or their inexperience or lack of knowledge.
- Disconnect the power supply before any cleaning or maintenance works to avoid electric shock.
- Disconnect the power supply if the device is not being used for a longer period of time.
- To disconnect the device from the power source remove the power plug from the power socket or switch off or turn out the according fuse.
- Only use the device for what it is intended to be used for, like grilling fish, meat or vegetables.
- Always only use the original parts to operate the device.
- Never round the cable around the device, the device might still be hot!
- In case of a failure or malfunction switch off the device and disconnect the power supply. Contact your dealer, he will repair the device using original spare parts and items.

## CONNECTION

Prior to installing the device check that the supply voltage is in accordance with the working voltage of the device! Please check identification plate on back of device.

Does the appliance come with a power plug, just put the power plug into a convenient mains socket

Does the appliance not come with a power plug, the installation of this device should be done by professional and qualified personnel only!



### **WARNING: RISK OF FIRE!**

- Do not place the appliance in striking distance of inflammable materials or liquids! Sufficient space must be kept to all sides at all time!



### **WARNING: RISK OF ELECTRICAL SHOCK!**

- Make sure that the power cord is free from any damages.
- A damaged appliance must not be operated! In this case contact your dealer!
- Prior to installing the device check that the supply voltage is in accordance with the working voltage of the device! Please check identification plate on back of device.
- As appropriate the installation should only be done by a professional.
- Do not use any adapters or extension cords!

## OPERATION

When using the WOW GRILL inside, it has to be operated under an extractor hood , to ensure sufficient fume outlet.

The WOW GRILL has up to three heating areas. The temperature of each area can be adjusted using the related thermostat. Temperatures can be set from 50 °C to 320 °C.

The heating areas are activated by turning the thermostat and setting a temperature. A green indicator lamp lights up and indicates, that the heating area is active. A red indicator lamp shows that the heating area is being heated up.

After reaching the temperature the thermostat will automatically switch off the power supply for the corresponding area. The red indicator lamp goes out. If the temperature drops 5 °C under the selected temperature, the power supply will be switched on again. As a result of this, energy is saved and a constant temperature and operation is guaranteed.

The food to be grilled will be placed directly onto the heating areas. To achieve a nonstick effect, the heating elements can be moisturized by rubbing it with an oil soaked paper towel.

A 5cm high drawer is located underneath the heating areas, to collect crumbs and escaping fat. The drawer can easily be removed for cleaning purposes.

The heating areas can be switched off by turning the thermostat to 0. Both indicator lamps will go out.



### **WARNING: HOT SURFACE! RISK OF BURNING!**

- Grill components get very hot during operation and can start fires! Any contact can result in serious burns!



### **WARNING: RISK OF ELECTRICAL SHOCK!**

- Never touch the device, the cable or the plug with wet or damp hands.
- The device must not be dipped into water or any other liquids. If the device drops into the water pull the plug immediately and have the device checked by a professional before the next use. Doing this might cause an electrical shock!



## MAINTENANCE

Maintenance work should only be done by the manufacturer, his maintenance department or similar professional personnel!



### **WARNING: RISK OF ELECTRICAL SHOCK!**

- A damaged device must not be operated! In this case disconnect the device from the power grid and contact your dealer!
- Never try to open or even repair the device on your own. - Danger to life!

## CLEANING

Due to the special design and the unique construction, the WOW GRILL is very easy to clean.

During grilling you can clean the grillage by using a soft brass wire brush or a Scotch-Brite griddle cleaner. Warning! The grillage is hot!


Prior to cleaning the grill, disconnect the device from the power grid. After grilling remove any remains from the grillage using the supplied scrapers. After that reduce the temperature to 80°C and clean the grillage with a soft brass wire brush or a Scotch-Brite griddle cleaner, that has been soaked in water, if necessary.

Warning! The grillage is hot during and after use!

Escaping fat and remains of grilled food are being collected in the drawer beneath the grillage. These can easily be removed, cleaned and emptied out.

When cleaning the grill, make sure not to damage the thermostat sensors beneath the grillage.

## RECYCLING AND DISPOSAL INFORMATION

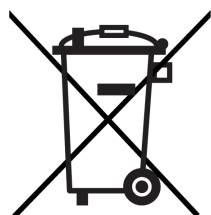

According to the European WEEE directive, electrical and electronic devices must not be disposed with consumer waste.

It's components must be recycled or disposed apart from each other. Otherwise contaminative and hazardous substances can pollute our environment.



You as consumer are committed by law to dispose electrical and electronic devices to public collecting points.

CE



SARO Gastro-Products GmbH  
Sandbahn 6, 46446 Emmerich am Rhein, Germany  
Tel. +49(0)2822 9258-0  
Fax +49(0)2822 18192  
E-Mail [info@saro.de](mailto:info@saro.de)