


## Instruction Manual

### Shoe cleaning machine model ESP 006

Order no: 328-1050

- 1 = Metal Housing
- 2 = ON/OFF Switch
- 3 = Refill Bottle
- 4 = Dispenser Cabinet
- 5 = Cleaning Brush (Centre)
- 6 = Polishing Brush (left)
- 7 = Mat
- 8 = Polishing Brush (right)

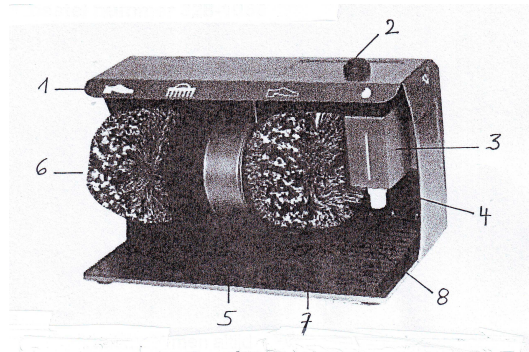

### 1. General information

- Carefully read these operating instructions as they contain important information for the safe and correct use of the appliance.
- Should you pass the appliance to a third party, these operating instructions should be handed over.
- As soon as you have unpacked the appliance, check whether everything is in a faultless condition. Should anything be damaged, do not connect the appliance as such, but inform your dealer.
- Dispose the packing material according to the local regulations. All the packaging items (plastic bags, cardboard, polystyrene foam, nails, etc..) must not be left within reach of children, in that they are potential sources of danger.
- Do not throw away the packing. You might need it for storage of the device, when moving or in case you need to send it back for repair purposes.
- The appliance must only be used for the intended purpose. Improper use can cause damages and lead to the loss of the warranty.
- The manufacturer/dealer cannot be made responsible for damages which arise through not observing these operating instructions. Apart from this, if these instructions are not observed, the safety of the appliance is no longer guaranteed.

### 2. Safety notes

- The appliance may be connected to a grounded socket only. Do not connect any other appliance to the same socket. The outlet must be easily accessible, so that the plug can easily be removed in the case of an emergency.
- Before you connect the appliance, make sure that the tension indicated on the identification plate agrees with the tension on your electricity mains.
- Always pull on the plug and not on the cable, if you pull the plug from the socket. Switch off the appliance before.
- The cable must not come into contact with water.
- Regularly check the cable. If it is damaged, it must be exchanged by a qualified specialist.

- Use the appliance on a stable, flat surface.
- Do not use the appliance outdoors or in washroom or in wet areas.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Unplug from outlet before cleaning or repair.
- Do not attempt to repair the appliance by yourself. Repairs may only be undertaken by a qualified specialist using original spare parts.
- Keep the hands away from rotary parts during the use
- In order to avoid damage, do not place articles on the surface.
- If you do not like to use the appliance for a longer time, then pull the power plug from the socket, clean the appliance and cover it with a air-permeable material.

**Note**


This model is a household shoe polishing machine and works with an intermittent duty motor. The duty cycle of the motor is designed to run for 5 minutes continuously and then 5 minutes off before restarting again. The motor has an automatic overload thermal cutoff which stops the appliance in case of excessive force which may cause over-heating. In case the overload cutoff is tripped, you have to wait for approximately 10-15 minutes before resuming regular operation. (This depends on the ambient temperature.)

**3. Operation**

- Press the ON/OFF button on the top of the housing to start the machine. This button is pressed once for ON and again for OFF.
- Use the cleaning brush (center) to remove mud and dust on the shoe, if necessary. The drop off of dirt is collected in the rubber mat located under the brushes. Remove the mat for cleaning and put it back again afterwards.
- To apply polishing cream to your shoe, lift your shoe and stroke the tap of the dispenser gently. Natural color shoe cream can be used for any colored shoes.
- It is strongly recommended that one of the polishing brushes is used for shoes applied natural color cream and another one, for colored cream. Do not mix use of the two brushes, or otherwise, it will affect the polishing result occasionally.
- When polishing is done, press the ON/OFF button again to switch the machine off.

**4. Refill the shoe cream**

- By looking through the dispenser indication slot, you can notice when the shoe cream should be refilled.
- Unlatch the dispenser and have it move outward to open the dispenser cabinet.
- Take the bottle out, loose the tap and fill in cream of the same kind. Put the spring and steel ball in proper position before recapping the tap tightly. Also, make sure the exhaust hole on top of the bottle is open, or otherwise, shoe cream will not flow out smoothly when tap is stroked. Actually, you can take the blocking pin out from the exhaust hole and throw it away at the first time you have your bottle filled.
- Put the cream bottle back into the cabinet and latch it in proper position on the machine.

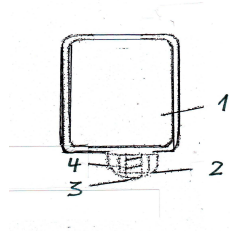

- |                  |
|------------------|
| 1 = Bottle       |
| 2 = Tap          |
| 3 = Cream outlet |
| 4 = Spring       |

## 5. Cleaning


- Unplug the unit before cleaning and maintenance.
- Do not clean the machine with water jet.
- Dust and mud on the mat can be cleaned by simply taken it out from the machine and have it washed or cleaned by vacuum cleaner. It is a good practice and important for safety to have the mat dry thoroughly in cool area before putting it back to the machine. Do not dry the mat under strong sunshine nor in hot area.

## 6. Changing brushes

When changing brush is seemed necessary, unscrew the fixing screw on the brush and pull it sideway to take it out from the shaft.

Replace the brush following the reversed procedure. Remember to have the screw fixed on the flat D-cut surface of the motor shaft.

## 7. Waste Disposal

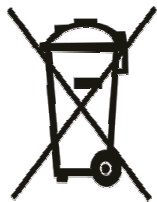

**For the disposal of the device follow the regulations applicable in your country.**