

Single Heating Plate Model HP 1

Order no.: 317-2078



Please read and keep
the instruction



in door use only.



Don't discard

Operating Instructions

=====
Model HP 1 (317-2078)
Suitable for 220V~240V.
Rating –230VAC, 50Hz. 80W
=====



【Before Using for the first time】

- Read ALL instructions carefully
- Remove all packaging
- Clean Appliance with a clean, damp cloth. Please note do not immerse in water

【Warnings & Remind】


- ☆ This product only suitable for Hot Drink to keep hot, it is cannot to heat Drinks from cold.
- ☆ Never immerse the machine in the water. If the machine has been soaked, it must be dried and checked by specialist before using it again.
- ☆ When the machine is in use, some parts of the machine are very hot. Ensure the line cord does not touch the hot parts. The use should also be careful not to touch the hot parts.
- ☆ Do not heat the Decanters in empty state.
- ☆ Please use soft cloth in wet to clean the products only.
- ☆ Remember to unplug from the electric source when units not in use.
- ☆ The power cord must be repair / replace per engineer of manufacturer or allowed technical person.

【Introduction】

We are really pleased that you have chosen our Carafe Warmers product, and we are very sure that you have made a correct decision. Before your use it, please read the following instructions carefully.

【Cleaning】

- DO NOT IMMERSE THE UNIT AT ANY TIME
- Ensure the unit is unplugged and cool before cleaning
- Clean the outside with a damp cloth
- Clean the inner bowl with hot soapy water and a soft brush. Do not use any metal tools or scourers
- Harsh cleaning chemicals may damage the appearance and performance of this unit.

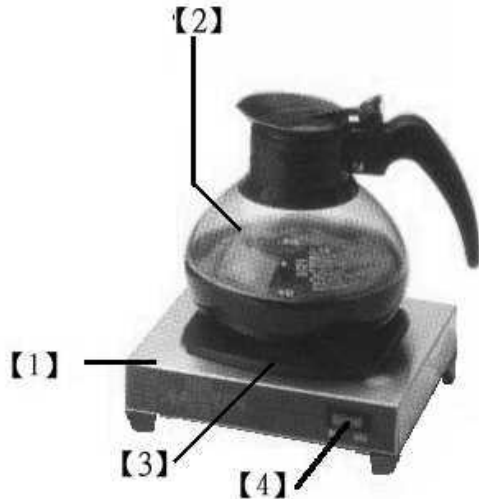

【Recognizing】

1. Warmer Base.
2. Decanter (separate purchasable).
3. Hot Plate.
4. Switch.

【Operation】

- Place the unit on a firm and horizontal table.
- Move Decanters that filled with Hot Drink on the Hot Plat.
- Turn the Switch ON, the Indicator on Switch will be light up, the Hot Plate starts to heat up.
- Set the switch to OFF position, when the Warmer no more to use or when the Decanters empty.



Caution! Hot Surface.

【Specification】

Model	HP 1	
Volt	220V ~ 240V, 50~60 Hz	
Wattage	80 W / 230V	
Warming Temperature	About 80±4 °C	

【Contact】

If you have any question or any advice, please kindly contact with your dealer.