 
 



RIF.	CODICE	R.C.	DENOMINAZIONE	DESCRIPTION	BESCHREIBUNG	DESIGNATION	DENOMINAZIONES
1	23/99604560		FIANCO SINISTRO BANCO	TABLE TOP LEFT SIDE	LINKE SEITENWAND TISCH	COTE GAUCHE COMPTOIR	FLANCO IZQUIERDO SOBREMESA
2	23/99605160		SCHIENALE INFERIORE BANCO	TABLE TOP BOTTOM REAR SIDE	UNTERES RÜCKENTEIL TISCH	DOS INFÉRIEUR COMPTOIR	PANEL TRASERO INFERIOR SOBREMESA
3	23/99604550		FIANCO DESTRO BANCO	TABLE TOP RIGHT SIDE	RECHTE SEITENWAND TISCH	COTE DROIT COMPTOIR	FLANCO DERECHO SOBREMESA
4	15/99600160		PIEDINO REGOLABILE BANCO	TABLE TOP ADJUSTABLE FOOT	EINSTELLBARER FUSS TISCH	PIE REGLABLE COMPTOIR	PIE REGULABLE SOBREMESA
5	14/99901629	*	SPIA ARANCIO	PILOT LIGHT	KONTROLLAMPE	LAMPE TMOIN	INDICADOR
6	29/99600149	*	MANOPOLA CUCINA ELETTRICA	ELECTRIC COOKER KNOB	DREHKNOPF E-HERD	POIGNEE CUISINIÈRE ELECTRIQUE	POMO COCINA ELÉCTRICA
7	WD/99600419		CRUSCOTTO SUPERIORE	UPPER PANEL	OBERES BRETT	TABEAU SUPERIEUR	TABLERO SUPERIOR
8	09/99900069	*	COMMUTATORE TERMOSTATO	SELECTOR SWITCH	UMSCHALTER	COMMUTATEUR	CONMUTADOR
9	07/99600049	*	PIASTRA ELETTRICA	ELECTRIC COOKTOP	ELEKTRO-KOCHPLATTE	PLAQUE DE CUISSON ÉLECTRIQUE	PLACA DE COCCIÓN ELÉCTRICA
10	23/99600370		FIANCO SINISTRO	LEFT SIDE	SEITENWAND LINKS	COTE GAUCHE	FLANCO IZQUIERDO
11	23/99600360		FIANCO DESTRO	RIGHT SIDE	SEITENWAND RECHTS	COTE DROIT	FLANCO DERECHO
12	15/99900199		MAGNETE PORTE	DOOR MAGNET	TÜR MAGNET	AIMANT PORTE	IMÁN PUERTA
13	23/99600400		CERNIERA PORTA	HINGE	SCHARNIER	CHARNIÈRE	BISAGRA
14	WD/99603809		PIANO SUPERIORE	TOP	OBERE PLATTE	PLATEAU	PLANO SUPERIOR
15	WP/99600060		PORTA	DOOR	DEUR	PORTE	PUERTA
16	15/99900499		MANIGLIA PORTA ARMADIO	HANDLE	HANDGRIFF	POIGNEE	MANIJA
17	14/99900750		MORSETTIERA	TERMINAL BOARD	KLEMMBRETT	BORNIER	PLACA DE BORNES
18	23/99600650		SCHIENALE INFERIORE	REAR SIDE	RÜCKWAND	DOS	PANEL TRASERO
19	23/99900400		GRIGLIA SCARICO FUMI	FLUE GRILL	ABGASGITTER	GRILLE FUMÉE	REJILLA SALIDA HUMOS
20	15/99901799		PIEDINO REGOLABILE	ADJUSTABLE FOOT	EINSTELLBARER FUSS	PIED REGLABLE	PIE REGULABLE
21	23/99600630		OMEGA ANT/POST INFERIORE	FRONT/REAR BOTTOM OMEGA-SHAPED SUPPORT	OMEGA-STÜTZE VORN/HINTEN UNTEN	SUPPORT OMEGA INFÉRIEUR AV./ARR.	SOPORTE INFERIOR OMEGA ANT./POST
22	23/99600640		FONDO	BOTTOM	BODEN	FOND	FONDO
23	68/99604389		OMEGA ANTERIORE TELAIO	FRAME FRONT OMEGA-SHAPED SUPPORT	OMEGA-STÜTZE VORN RAHMEN	SUPPORT OMEGA AVANT BATI	SOPORTE OMEGA ANTERIOR BASTIDOR
24	23/99600611		MASCHERINA FISSAGGIO CRUSCOTTO	CONTROL PANEL FIXING PLATE	BLLENDE BEFESTIGUNG SCHALT TAFEL	PLAQUE FIXATION TABLEAU DE COMMANDE	PANEL FIJACIÓN TABLERO DE CONTROL

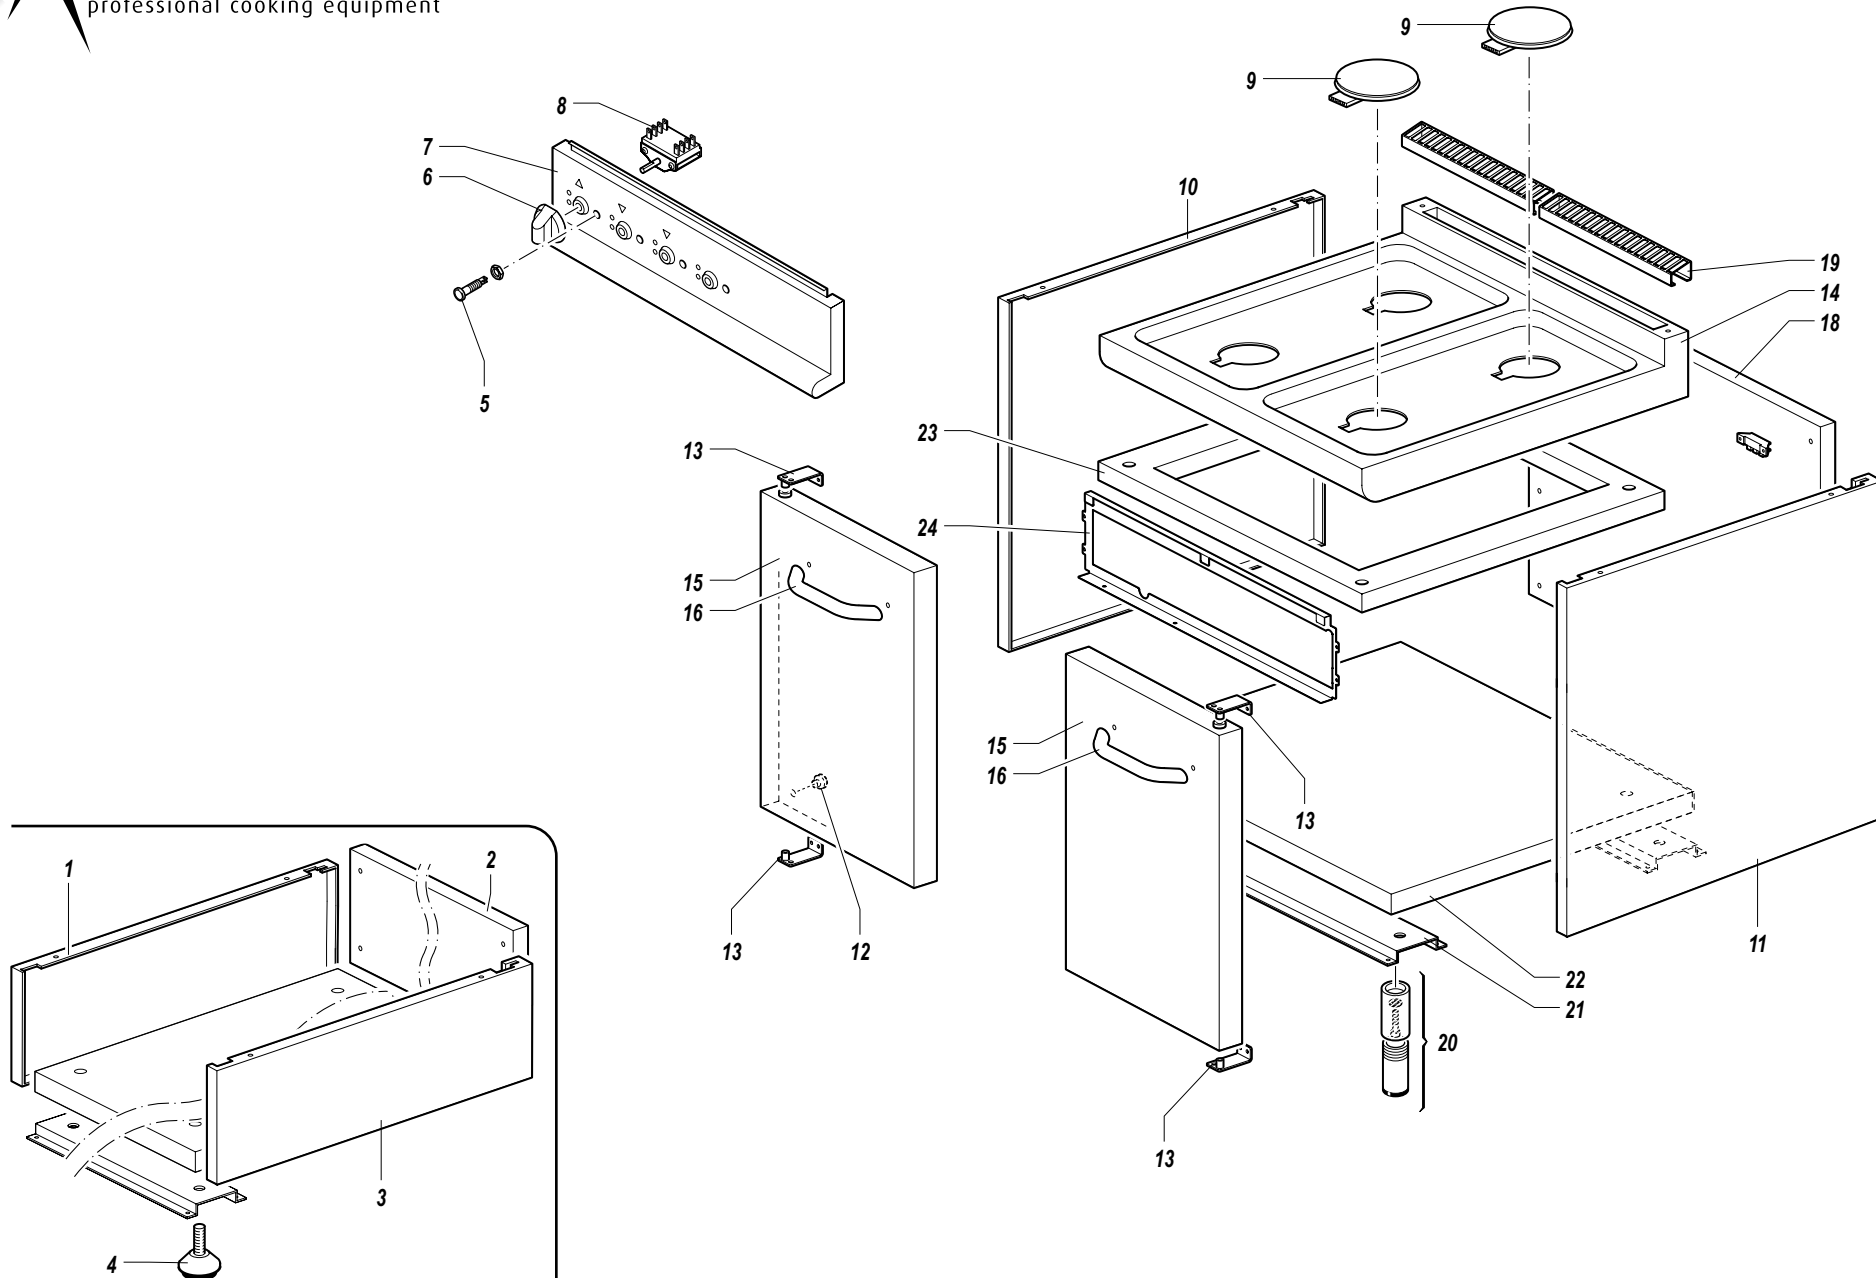


RIF.	CODICE	R.C.	DENOMINAZIONE	DESCRIPTION	BESCHREIBUNG	DESIGNATION	DENOMINAZIONE
1	23/99604560		FIANCO SINISTRO BANCO	TABLE TOP LEFT SIDE	LINKE SEITENWAND TISCH	COTE GAUCHE COMPTOIR	FLANCO IZQUIERDO SOBREMESA
2	23/99605200		SCHIENALE INFERIORE BANCO	TABLE TOP BOTTOM REAR SIDE	UNTERES RÜCKENTEIL TISCH	DOS INFÉRIEUR COMPTOIR	PANEL TRASERO INFERIOR SOBREMESA
3	23/99604550		FIANCO DESTRO BANCO	TABLE TOP RIGHT SIDE	RECHTE SEITENWAND TISCH	COTE DROIT COMPTOIR	FLANCO DERECHO SOBREMESA
4	15/99600160		PIEDINO REGOLABILE BANCO	TABLE TOP ADJUSTABLE FOOT	EINSTELLBARER FUSS TISCH	PIE REGLABLE COMPTOIR	PIE REGULABLE SOBREMESA
5	14/99901629	*	SPIA ARANCIO	PILOT LIGHT	KONTROLLAMPE	LAMPE TMOIN	INDICADOR
6	29/99600149	*	MANOPOLA CUCINA ELETTRICA	ELECTRIC COOKER KNOB	DREHKNOPF E-HERD	POIGNEE CUISINIÈRE ELECTRIQUE	POMO COCINA ELÉCTRICA
7	WD/99600949		CRUSCOTTO SUPERIORE	UPPER PANEL	OBERES BRETT	TABLEAU SUPERIEUR	TABLERO SUPERIOR
8	09/99900069	*	COMMUTATORE TERMOSTATO	SELECTOR SWITCH	UMSCHALTER	COMMUTATEUR	CONMUTADOR
9	07/99600049	*	PIASTRA ELETTRICA	ELECTRIC COOKTOP	ELEKTRO-KOCHPLATTE	PLAQUE DE CUISSON ÉLECTRIQUE	PLACA DE COCCIÓN ELÉCTRICA
10	23/99600370		FIANCO SINISTRO	LEFT SIDE	SEITENWAND LINKS	COTE GAUCHE	FLANCO IZQUIERDO
11	23/99600360		FIANCO DESTRO	RIGHT SIDE	SEITENWAND RECHTS	COTE DROIT	FLANCO DERECHO
12	15/99900199		MAGNETE PORTE	DOOR MAGNET	TÜR MAGNET	AIMANT PORTE	IMÁN PUERTA
13	23/99600400		CERNIERAPORTA	HINGE	SCHARNIER	CHARNIERE	BISAGRA
14	WD/99603819		PIANO SUPERIORE	TOP	OBERE PLATTE	PLATEAU	PLANO SUPERIOR
15	WP/99600060		PORTA	DOOR	DEUR	PORTE	PUERTA
16	15/99900499		MANIGLIA PORTA ARMADIO	HANDLE	HANDGRIFF	POIGNEE	MANIJA
17	14/99900750		MORSETTIERA	TERMINAL BOARD	KLEMMBRETT	BORNIER	PLACA DE BORNES
18	23/99600550		SCHIENALE INFERIORE	REAR SIDE	RÜCKWAND	DOS	PANEL TRASERO
19	23/99900400		GRIGLIA SCARICO FUMI	FLUE GRILL	ABGASGITTER	GRILLE FUMÉE	REJILLA SALIDA HUMOS
20	23/99600540		FONDO	BOTTOM	BODEN	FOND	FONDO
21	15/99901799		PIEDINO REGOLABILE	ADJUSTABLE FOOT	EINSTELLBARER FUSS	PIED REGLABLE	PIE REGULABLE
22	23/99600530		OMEGA ANT/POST INFERIORE	FRONT/REAR BOTTOM OMEGA-SHAPED SUPPORT	OMEGA-STÜTZE VORN/HINTEN UNTEN	SUPPORT OMEGA INFÉRIEUR AV./ARR.	SOPORTE INFERIOR OMEGA ANT./POST
23	68/99604359		OMEGA ANTERIORE TELAIO	FRAME FRONT OMEGA-SHAPED SUPPORT	OMEGA-STÜTZE VORN RAHMEN	SUPPORT OMEGA AVANT BÂTI	SOPORTE OMEGA ANTERIOR BASTIDOR
24	23/99600511		MASCHERINA FISSAGGIO CRUSCOTTO	CONTROL PANEL FIXING PLATE	BLLENDE BEFESTIGUNG SCHALTTAFEL	PLAQUE FIXATION TABLEAU DE COMMANDE	PANEL FIJACIÓN TABLERO DE CONTROL

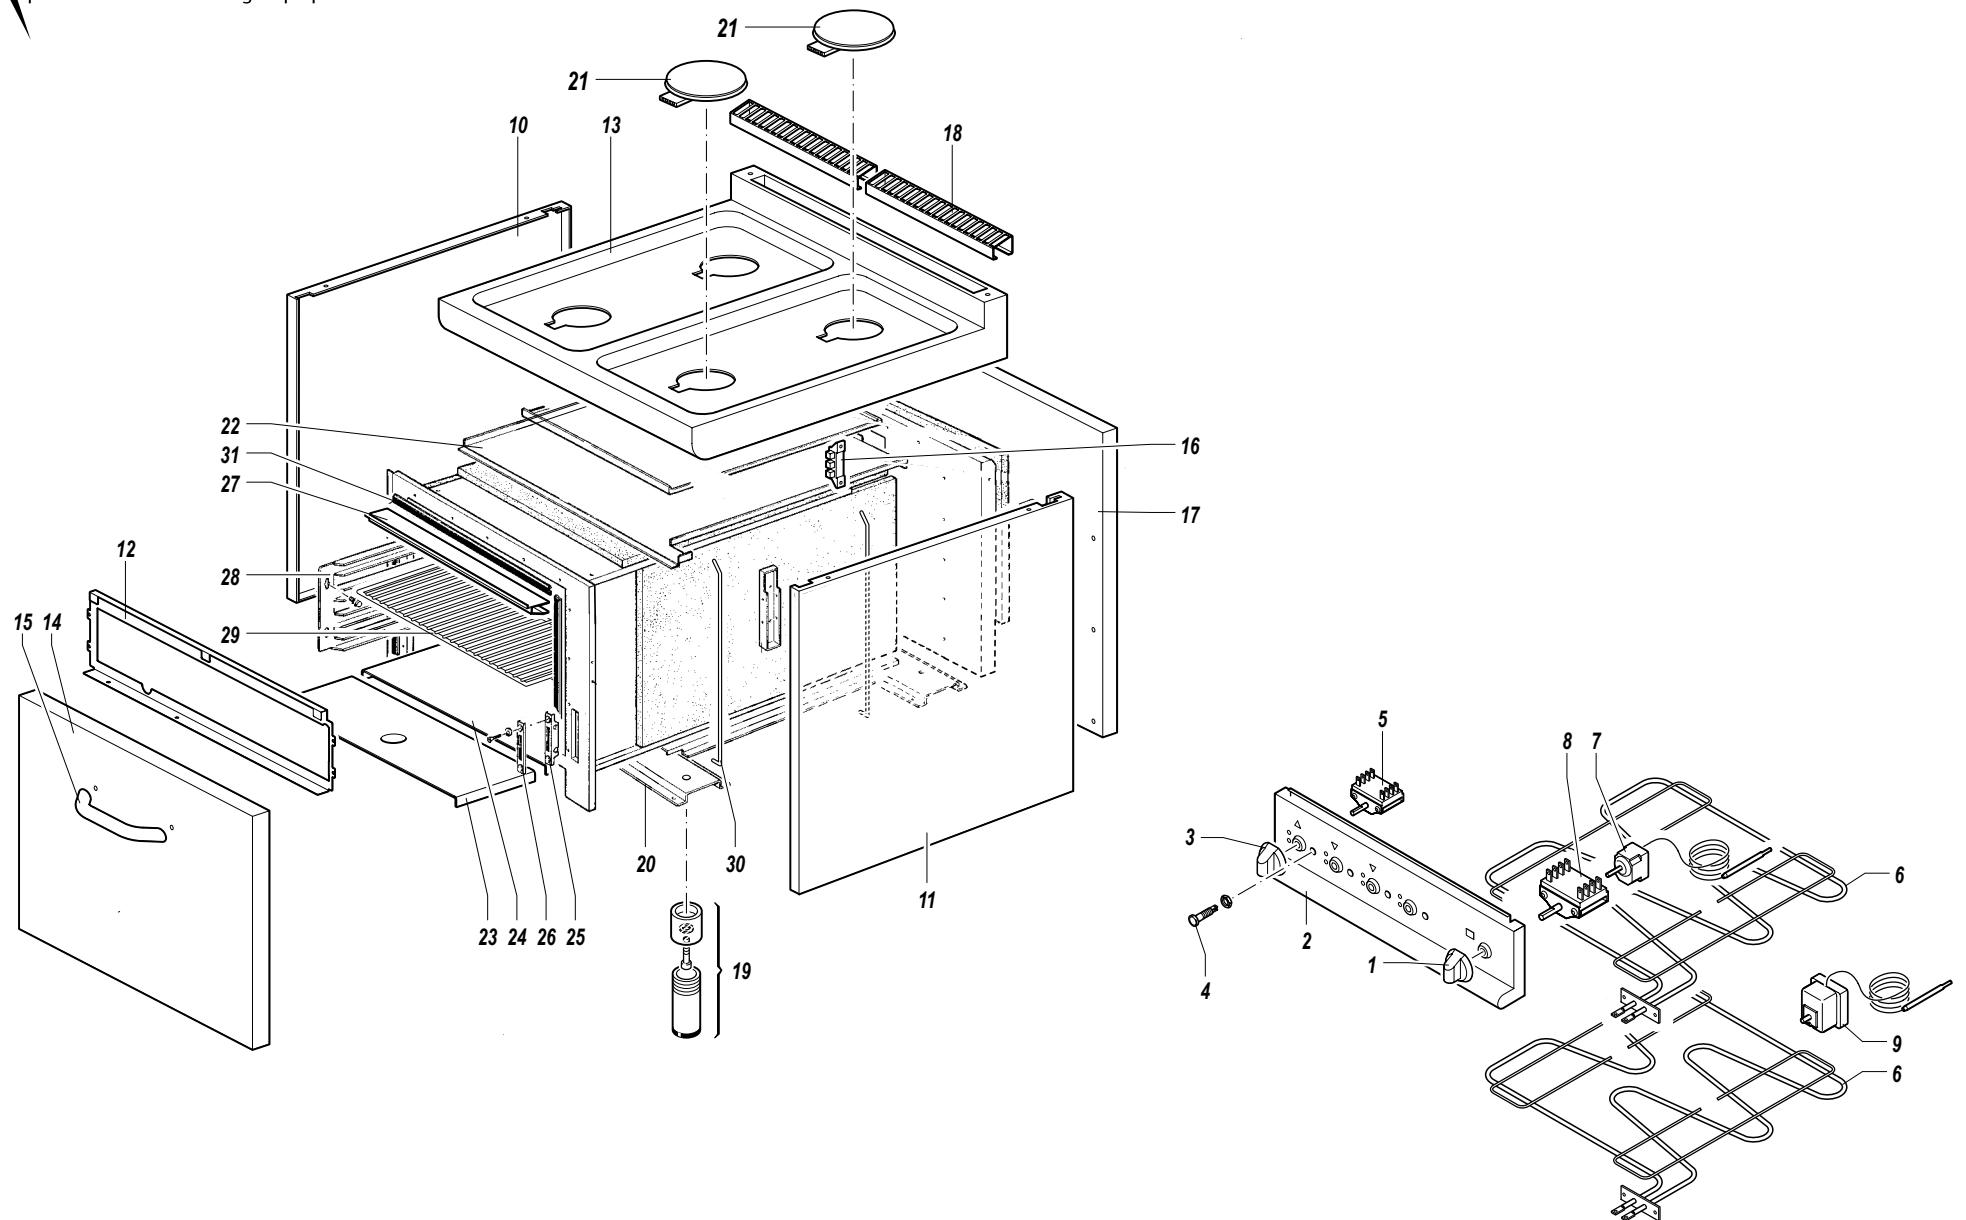

RIF.	CODICE	R.C.	DENOMINAZIONE	DESCRIPTION	BESCHREIBUNG	DESIGNATION	DENOMINACIONES
1	29/99600021	*	MANOPOLA FORNO	OVEN KNOB	DREHKNOPF OFEN	POIGNEE FOUR	POMO HORNO
1	29/99600022	*	MANOPOLA COMMUTATORE 0 3	0 3 SWITCH KNOB	DREHKNOPF UMSCHALTER 0 3	POIGNEE COMMUTATEUR 0 3	POMO CONMUTADOR 0 3
2	WD/99600100		CRUSCOTTO SUPERIORE	UPPER PANEL	OBERES BRETT	TABEAU SUPERIEUR	TABLERO SUPERIOR
3	29/99600149	*	MANOPOLA CUCINA ELETTRICA	ELECTRIC COOKER KNOB	DREHKNOPF E-HERD	POIGNEE CUISINIERE ELECTRIQUE	POMO COCINA ELÉCTRICA
4	14/99901629	*	SPIA ARANCIO	PILOT LIGHT	KONTROLLAMPE	LAMPE TEMOIN	INDICADOR
5	09/99900069	*	COMMUTATORE TERMOSTATO	THERMOSTAT	THERMOSTAT	THERMOSTAT	TERMOSTATO
6	07/99600019		RESISTENZA FORNO	RESISTOR	RESISTOR	RESISTANCE	RESISTOR
7	08/99900179	*	TERMOSTATO LAVORO FORNO	OVEN WORK THERMOSTAT	THERMOSTAT BETRIEB OFEN	THERMOSTAT TRAVAIL FOUR	TERMOSTATO DE TRABAJO HORNO
8	09/16520139	*	COMMUTATORE FORNO	OVEN SELECTOR SWITCH	UMSCHALTER OFEN	COMMUTATEUR FOUR	CONMUTADOR HORNO
9	08/85900019	*	TERMOSTATO DI SICUREZZA FORNO	OVEN SAFETY THERMOSTAT	SICHERHEITSTHERMOSTAT OFEN	THERMOSTAT SECURITE FOUR	TERMOSTATO DE SEGURIDAD HORNO
10	23/99600371		FIANCO SINISTRO	LEFT SIDE	SEITENWAND LINKS	COTE GAUCHE	FLANCO IZQUIERDO
11	23/99600361		FIANCO DESTRO	RIGHT SIDE	SEITENWAND RECHTS	COTE DROIT	FLANCO DERECHO
12	23/99600511		MASCHERINA FISSAGGIO CRUSCOTTO	CONTROL PANEL FIXING PLATE	BLENDE BEFESTIGUNG SCHALTAFEL	PLAQUE FIXATION TABLEAU DE COMMANDE	PANEL FIJACIÓN TABLERO DE CONTROL
13	WD/99603819		PIANO SUPERIORE	TOP	OBERE PLATTE	PLATEAU	PLANO SUPERIOR
14	WP/99600009		PORTA	DOOR	DEUR	PORTE	PUERTA
15	15/99900499		MANIGLIA PORTA ARMADIO	HANDLE	HANDGRIFF	POIGNEE	MANIJA
16	14/99900750		MORSETTIERA	TERMINAL BOARD	KLEMMBRETT	BORNIER	PLACA DE BORNES
17	23/99600550		SCHIENALE INFERIORE	REAR SIDE	RÜCKWAND	DOS	PANEL TRASERO
18	23/99900400		GRIGLIA SCARICO FUMI	FLUE GRILL	ABGASGITTER	GRILLE FUMEE	REJILLA SALIDA HUMOS
19	15/99901799		PIEDINO REGOLABILE	ADJUSTABLE FOOT	EINSTELLBARER FUSS	PIED REGLABLE	PIE REGULABLE
20	23/99600531		OMEGA ANTER. POSTER. FORNO	OVEN FRONT/REAR OMEGA-SHAPED SUPPORT	OMEGA-STÜTZE VORN HINTEN OFEN	SUPPORT OMEGA AVANT/ARRIERE FOUR	SOPORTE OMEGA ANT./POST. HORNO
21	07/99600049	*	PIASTRA ELETTRICA	ELECTRIC COOKTOP	ELEKTRO-KOCHPLATTE	PLAQUE DE CUISSON ÉLECTRIQUE	PLACA DE COCCIÓN ELÉCTRICA
22	23/99600810		SCORRIBACINELLA	TRAY RUNNER	VERSCHIEBEBAND SCHALEN	GLISSE-TABLETTE	GUÍA BANDEJA
23	15/99600140		PLATEA ANTERIORE	OVEN BASE	OFENPLATTE	SOUBASSEMENT	PLACA FONDO HORNO
24	15/99600150		PLATEA POSTERIORE	OVEN BASE	OFENPLATTE	SOUBASSEMENT	PLACA FONDO HORNO
25	28/17610029		PORTARULLINO CERNIERA	HINGE ROLL HOLDER	WALZENTRÄGER SCHARNIER	PORTE ROULEAU CHARNIERE	PORTA RODILLO BISAGRA
26	23/99900099		PIASTRA PORTARULLINO	ROLL HOLDING PLATE	PLATTE SCHARNIERWALZE	PLAQUE PORTE ROULEAU	PLACA PORTA RODILLO
27	WD/99600760		DEFLETTORE	FLAP	ABLENKPLATTE	DEFLECTEUR	DEFLECTOR
28	68/99600030		GUIDA GRIGLIA FORNO	GUIDE	FÜHRUNG	GUIDE	GUÍA
29	21/GX2/1		GRIGLIA CROMATA FORNO	GRID	GITTER	GRILLE	PARILLA
30	69/99901009		FERMALANA	TUBE	ROHR	TUBE	TUBO
31	29/99600212		GUARNIZIONE PORTA FORNO	PACKING	DICHTUNG	JOINT	GUARNICIÓN

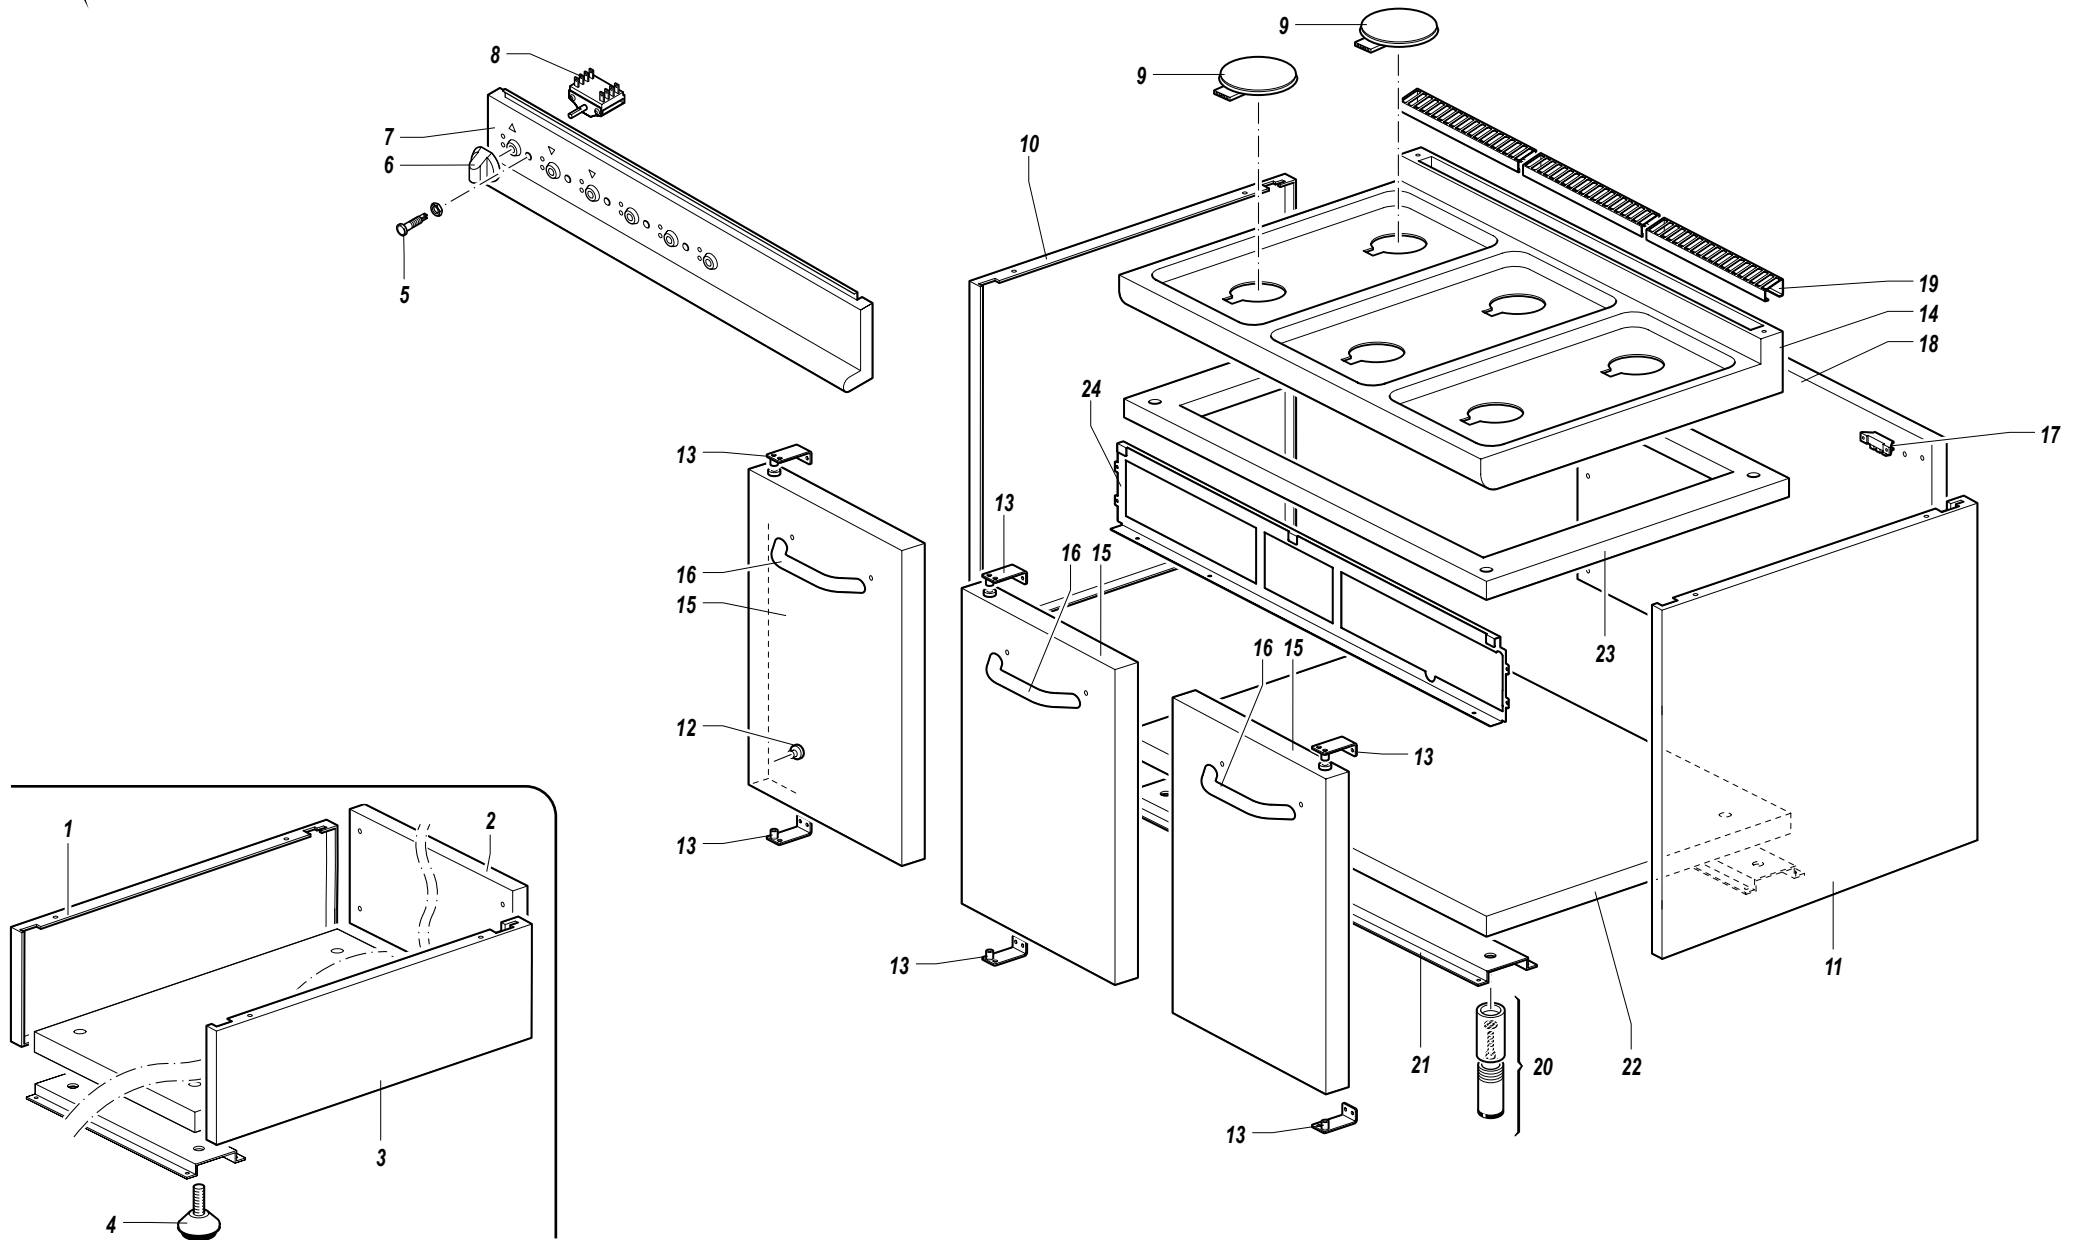 

RIF.	CODICE	R.C.	DENOMINAZIONE	DESCRIPTION	BESCHREIBUNG	DESIGNATION	DENOMINAZIONES
1	23/99604560		FIANCO SINISTRO BANCO	TABLE TOP LEFT SIDE	LINKE SEITENWAND TISCH	COTE GAUCHE COMPTOIR	FLANCO IZQUIERDO SOBREMESA
2	23/99605210		SCHIENALE INFERIORE BANCO	TABLE TOP BOTTOM REAR SIDE	UNTERES RÜCKENTEIL TISCH	DOS INFERIEUR COMPTOIR	PANEL TRASERO INFERIOR SOBREMESA
3	23/99604550		FIANCO DESTRO BANCO	TABLE TOP RIGHT SIDE	RECHTE SEITENWAND TISCH	COTE DROIT COMPTOIR	FLANCO DERECHO SOBREMESA
4	15/99600160		PIEDINO REGOLABILE BANCO	TABLE TOP ADJUSTABLE FOOT	EINSTELLBARER FUSS TISCH	PIE REGLABLE COMPTOIR	PIE REGULABLE SOBREMESA
5	14/99901629	*	SPIA ARANCIO	PILOT LIGHT	KONTROLLAMPE	LAMPE TMOIN	INDICADOR
6	29/99600149	*	MANOPOLA CUCINA ELETTRICA	ELECTRIC COOKER KNOB	DREHKNOPF E-HERD	POIGNEE CUISINIERE ELECTRIQUE	POMO COCINA ELÉTRICA
7	WD/99600959		CRUSCOTTO SUPERIORE	UPPER PANEL	OBERES BRETT	TABEAU SUPERIEUR	TABLERO SUPERIOR
8	09/99900049	*	COMMUTATORE TERMOSTATO	SELECTOR SWITCH	UMSCHALTER	COMMUTATEUR	CONMUTADOR
9	07/99600049	*	PIASTRA ELETTRICA	ELECTRIC COOKTOP	ELEKTRO-KOCHPLATTE	PLAQUE DE CUISSON ÉLECTRIQUE	PLACA DE COCCIÓN ELÉCTRICA
10	23/99600370		FIANCO SINISTRO	LEFT SIDE	SEITENWAND LINKS	COTE GAUCHE	FLANCO IZQUIERDO
11	23/99600360		FIANCO DESTRO	RIGHT SIDE	SEITENWAND RECHTS	COTE DROIT	FLANCO DERECHO
12	15/99900199		MAGNETE PORTE	DOOR MAGNET	TÜRMAGNET	AIMANT PORTE	IMÁN PUERTA
13	23/99600400		CERNIERA PORTA	HINGE	SCHARNIER	CHARNIERE	BISAGRA
14	WD/99603829		PIANO SUPERIORE	TOP	OBERE PLATTE	PLATEAU	PLANO SUPERIOR
15	WP/99600060		PORTA	DOOR	DEUR	PORTE	PUERTA
16	15/99900499		MANIGLIA PORTA ARMADIO	HANDLE	HANDGRIFF	POIGNEE	MANIJA
17	14/99900750		MORSETTIERA	TERMINAL BOARD	KLEMMBRETT	BORNIER	PLACA DE BORNES
18	23/99600350		SCHIENALE INFERIORE	REAR SIDE	RÜCKWAND	DOS	PANEL TRASERO
19	23/99900400		GRIGLIA SCARICO FUMI	FLUE GRILL	ABGASGITTER	GRILLE FUMEE	REJILLA SALIDA HUMOS
20	15/99901799		PIEDINO REGOLABILE	ADJUSTABLE FOOT	EINSTELLBARER FUSS	PIED REGLABLE	PIE REGULABLE
21	23/99600330		OMEGA ANT/POST INFERIORE	FRONT/REAR BOTTOM OMEGA-SHAPED SUPPORT	OMEGA-STÜTZE VORN/HINTEN UNTEN	SUPPORT OMEGA INFERIEUR AV./ARR.	SOPORTE INFERIOR OMEGA ANT./POST.
22	23/99600340		FONDO ARMADIO	BOTTOM	BODEN	FOND	FONDO
23	68/99604349		OMEGA ANTERIORE TEALIO	FRAME FRONT OMEGA-SHAPED SUPPORT	OMEGA-STÜTZE VORN RAHMEN	SUPPORT OMEGA AVANT BATI	SOPORTE OMEGA ANTERIOR BASTIDOR
24	23/99600310		MASCHERINA FISSAGGIO CRUSCOTTO	CONTROL PANEL FIXING PLATE	BLLENDE BEFESTIGUNG SCHALTAFEL	PLAQUE FIXATION TABLEAU DE COMMANDE	PANEL FIJACIÓN TABLERO DE CONTROL

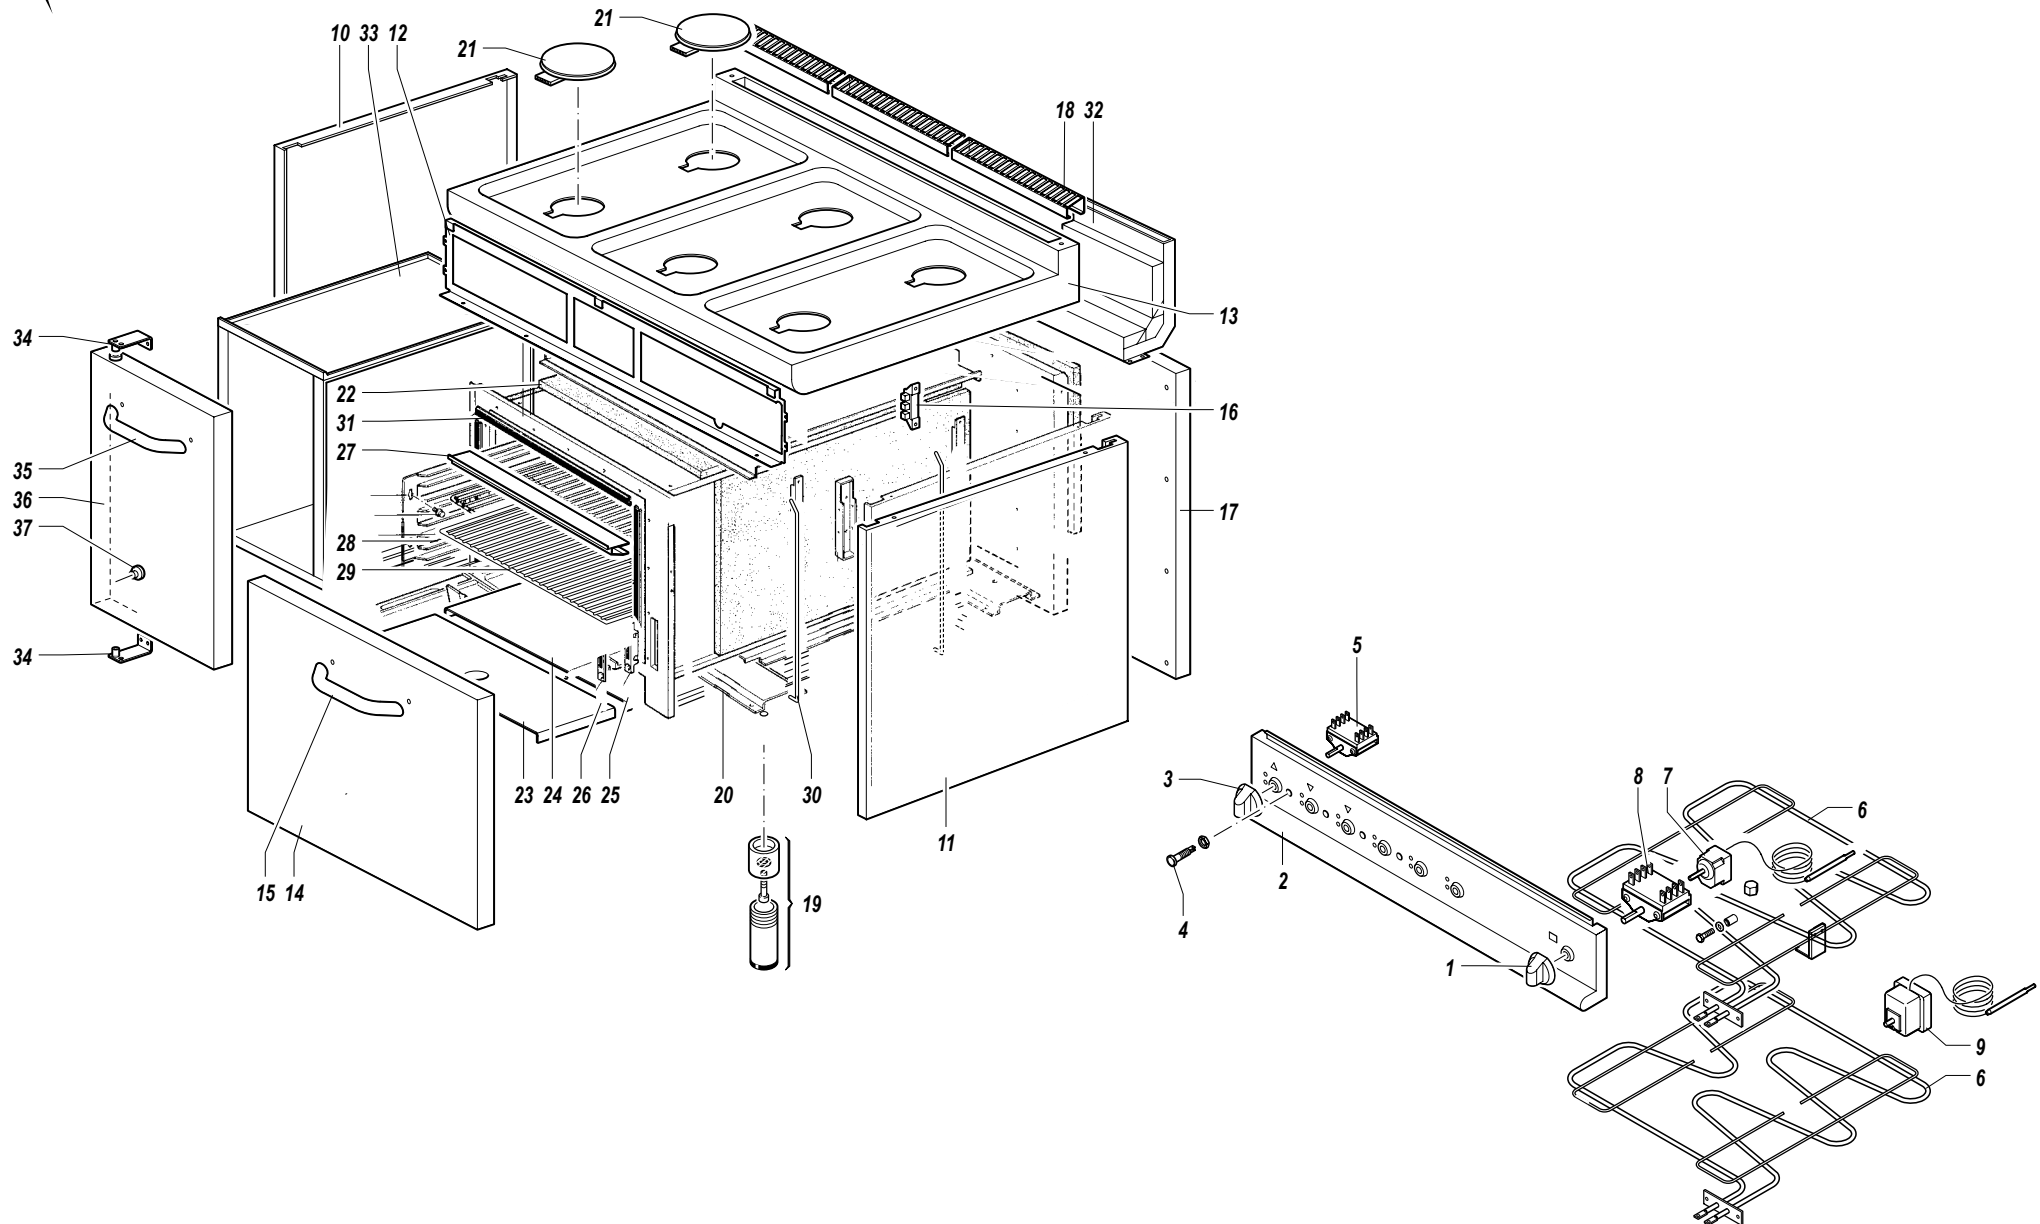 

RIF.	CODICE	R.C.	DENOMINAZIONE	DESCRIPTION	BESCHREIBUNG	DESIGNATION	DENOMINAZIONES
1	29/99600021	*	MANOPOLA FORNO	OVEN KNOB	DREHKNOPF OFEN	POIGNEE FOUR	POMO HORNO
1	29/99600022		MANOPOLA COMMUTATORE 0 3	0 3 SWITCH KNOB	DREHKNOPF UMSCHALTER 0 3	POIGNEE COMMUTATEUR 0 3	POMO CONMUTADOR 0 3
2	WD/99600959		CRUSCOTTO SUPERIORE	UPPER PANEL	OBERES BRETT	TABEAU SUPERIEUR	TABLERO SUPERIOR
3	29/99600319	*	MANOPOLA CUCINA ELETTRICA	ELECTRIC COOKER KNOB	DREHKNOPF E-HERD	POIGNEE CUISINIERE ELECTRIQUE	POMO COCINA ELÉTRICA
4	14/99901629	*	SPIA ARANCIO	PILOT LIGHT	KONTROLLAMPE	LAMPE TEMOIN	INDICADOR
5	09/99900069	*	COMMUTATORE TERMOSTATO	THERMOSTAT	THERMOSTAT	THERMOSTAT	TERMOSTATO
6	07/99600019		RESISTENZA FORNO	RESISTOR	RESISTOR	RESISTANCE	TERMOSTATO
7	08/99900179	*	TERMOSTATO LAVORO FORNO	OVEN WORK THERMOSTAT	THERMOSTAT BETRIEB OFEN	THERMOSTAT TRAVAIL FOUR	TERMOSTATO DE TRABAJO HORNO
8	09/16520139	*	COMMUTATORE FORNO	OVEN SELECTOR SWITCH	UMSCHALTER OFEN	COMMUTATEUR FOUR	CONMUTADOR HORNO
9	08/85900019	*	TERMOSTATO DI SICUREZZA FORNO	OVEN SAFETY THERMOSTAT	SICHERHEITSTHERMOSTAT OFEN	THERMOSTAT SECURITE FOUR	TERMOSTATO DE SEGURIDAD HORNO
10	23/99600371		FIANCO SINISTRO	LEFT SIDE	SEITENWAND LINKS	COTE GAUCHE	FLANCO IZQUIERDO
11	23/99600361		FIANCO DESTRO	RIGHT SIDE	SEITENWAND RECHTS	COTE DROIT	FLANCO DERECHO
12	23/99600310		MASCHERINA FISSAGGIO CRUSCOTTO	CONTROL PANEL FIXING PLATE	BLLENDE BEFESTIGUNG SCHALTAFEL	PLAQUE FIXATION TABLEAU DE COMMANDE	PANEL FIJACIÓN TABLERO DE CONTROL
13	WD/99603829		PIANO SUPERIORE	TOP	OBERE PLATTE	PLATEAU	PERFIL
14	WP/99600009		PORTA	DOOR	DEUR	PORTE	PUERTA
15	15/99900500		MANIGLIA PORTA ARMADIO	HANDLE	HANDGRIFF	POIGNEE	MANIJA
16	14/99900750		MORSETTIERA	TERMINAL BOARD	KLEMMBRETT	BORNIER	PLACA DE BORNES
17	23/99600350		SCHIENALE INFERIORE	REAR SIDE	RÜCKWAND	DOS	PANEL TRASERO
18	23/99900400		GRIGLIA SCARICO FUMI	FLUE GRILL	ABGASGITTER	GRILLE FUMEE	REJILLA SALIDA HUMOS
19	15/99901799		PIEDINO REGOLABILE	ADJUSTABLE FOOT	EINSTELLBARER FUSS	PIED REGLABLE	PIE REGULABLE
20	23/99901389		OMEGA ANT/POST INFERIORE	FRONT/REAR BOTTOM OMEGA-SHAPED SUPPORT	OMEGA-STÜTZE VORN/HINTEN UNTEN	SUPPORT OMEGA INFERIEUR AV./ARR.	SOPORTE INFERIOR OMEGA ANT./POST.
21	07/99600049	*	PIASTRA ELETTRICA	ELECTRIC COOKTOP	ELEKTRO-KOCHPLATTE	PLAQUE DE CUISSON ÉLECTRIQUE	PLACA DE COCCIÓN ELÉTRICA
22	23/99600820		SCORRIBACINELLA	TRAY RUNNER	VERSCHIEBEBAND SCHALEN	GLISSE-TABLETTE	GUÍA BANDEJA
23	15/99600140		PLATEA ANTERIORE	OVEN BASE	OFENPLATTE	SOUBASSEMENT	PLACA FONDO HORNO
24	15/99600150		PLATEA POSTERIORE	OVEN BASE	OFENPLATTE	SOUBASSEMENT	PLACA FONDO HORNO
25	28/17610029		PORTARULLINO CERNIERA	HINGE ROLL HOLDER	WALZENTRÄGER SCHARNIER	PORTE ROULEAU CHARNIERE	PORTA RODILLO BISAGRA
26	23/99900099		PIASTRA PORTARULLINO	ROLL HOLDING PLATE	PLATTE SCHARNIERWALZE	PLAQUE PORTE ROULEAU	PLACA PORTA RODILLO
27	WD/99600760		DEFLETTORE	FLAP	ABLENKPLATTE	DEFLECTEUR	DEFLECTOR
28	68/99600030		GUIDA GRIGLIA FORNO	GUIDE	FÜHRUNG	GUIDE	GUIA
29	21/GX2/1		GRIGLIA CROMATA FORNO	GRID	GITTER	GRILLE	PARILLA
30	69/99901009		FERMALANA	FERMALANA	FERMALANA	FERMALANA	FERMALANA
31	29/99600212		GUARNIZIONE PORTA FORNO	PACKING	DICHTUNG	JOINT	GUARNICIÓN
32	68/99601219		CAMINO SCARICO FUMI	SMOKE OUTLET	RAUCHABZUG	EVENT FUMEE	SALIDA HUMOS
33	68/99600279		ARMADIETTO	CABINET	KASTEN	CABINET	REJILLA SALIDA HUMOS
34	23/99600400		CERNIERA PORTA	HINGE	SCHARNIER	CHARNIERE	BISAGRA
35	15/99900499		MANIGLIA PORTA ARMADIO	HANDLE	HANDGRIFF	POIGNEE	MANIJA
36	WP/99600060		PORTA ESTERNA SX ARMADIO	LH OUTER DOOR	ÄUSSERE TÜR LINKS	PORTE EXTERNE GAUCHE	PUERTA EXTERNA IZQ.
37	15/99900199		MAGNETE PORTE	DOOR MAGNET	TÜRMAGNET	AIMANT PORTE	CASQUILLO LÁMPARA

