SANTOS SAS:

140-150 AVENUE ROGER SALENGRO 69120 VAULX-EN-VELIN (LYON) - FRANCE TÉL. 33 (0) 472 37 35 29 - FAX 33 (0) 478 26 58 21 -

E-Mail: santos@santos.fr www.santos.fr



GRATER N°2

ICE CRUSHER N°9

USER AND MAINTENANCE MANUAL



IMPORTANT: documents included in this manual to be kept:

- "CE" COMPLIANCE DECLARATION
- WARRANTY CERTIFICATE



Coffee grinders - Fruit juicers - Mixers - Blenders - Drinks dispensers - Planetary mixers Cheese graters - Ice crushers - Mincers - Vegetable slicers – Dough mixer Moulins à café - Presse-fruits - Mixers - Blenders - Distributeurs de boissons - Batteurs mélangeurs -Pétrin - Râpes à fromage - Broyeurs à glaçons - Hache-viande - Coupe-légumes

MODELES DEPOSES FRANCE ET INTERNATIONAL INTERNATIONALLY PATENTED MODELS



"CE" COMPLIANCE DECLARATION

THE MANUFACTURER:

SANTOS SAS - 140-150, Av. Roger SALENGRO 69120 VAULX-EN-VELIN (LYON) FRANCE

HEREBY DECLARES THAT THE MACHINE DESIGNATED ON THE IDENTIFICATION PLATE AFFIXED:

- UNDER THE APPLIANCE,
- ON THE WARRANTY CERTIFICATE ON THE LAST PAGE OF THIS MANUAL,

COMPLIES WITH THE PROVISIONS OF THE "machines" DIRECTIVE 2006/42/EC AND THE NATIONAL LEGISLATION TRANSPOSING IT.

IT ALSO COMPLIES WITH THE PROVISIONS OF THE FOLLOWING EUROPEAN DIRECTIVES:

No. 73/23/EEC dated 19/02/73 (Low voltage directive)

No. 2004/108/EC (CEM directive)

No. 2002/95/EC (RoHS directive)

No. 2002/96/EC (WEEE directive)

The machine complies with the provisions of the following harmonised European standards:

EN ISO 12100 -1 and 2 : 2004 - Machine safety devices - General design principles

NF EN 60204-1: 2006: Machine safety devices - Machine electrical equipment - General regulations

NF EN 1678:1998 +A1: 2010: Machines for food products - vegetable slicers

SIGNED IN VAULX-EN-VELIN ON: 01/01/2010

SIGNATORY'S TITLE: CHIEF EXECUTIVE OFFICER

SIGNATORY'S NAME: Aurélien FOUQUET

SIGNATURE



CONTENTS

"CE" COMPLIANCE DECLARATION	2
IMPORTANT SAFEGUARDS	4
IMPROPER USE:	
ELECTRICAL CONNECTION:	4
USING FOR THE 1st TIME:	
RECYCLING THE PRODUCT AT THE END OF ITS SERVICE LIFE	5
INTRODUCTION	6
Grater N°2	
Ice crusher N°9	6
USING THE MACHINE	7
USING (figure 1)	7
CHANGING DISC	
TAKING APART (left-handed thread): (figure 3)	7
REASSEMBLING: (figure 4)	
ADJUSTING THE ICE CRUSHER: (figure 5)	
SAFE ACCESS TO THE TOOLS: (figure 6)	
MOTOR OVERLOAD SAFETY FEATURE:	
MAINTENANCE	
Discharging the capacitor:	
Spare parts:	
CLEANING	
TROUBLESHOOTING	
The appliance stops further to an overload:	
MACHINE TECHNICAL SPECIFICATIONS	
220-240V 50Hz wiring diagram	
110-120V 50/60Hz wiring diagram	
220-240V 60Hz wiring diagram	
WARRANTY CERTIFICATE	_
APPLIANCE IDENTIFICATION PLATE	16



IMPORTANT SAFEGUARDS

When using, cleaning or maintaining the machine, always follow these instructions:

Read all instructions

Note: You will find it easier to understand the next few paragraphs if you refer to the diagrams at the end of this manual.

IMPROPER USE:



- 1. Do not place food in the channel and press with the plunger before you have started the machine.
- 2. Neither a hose nor a pressure hose should be used for cleaning.
- 3. For electrocution risk protection reasons, never plunge the base into water or any other liquid.
- 4. Unplug the appliance before carrying out any work on it: cleaning, maintenance or repair.
- 5. The use of spare parts other than certified SANTOS original parts is prohibited.

ELECTRICAL CONNECTION:

- The appliance's power supply is available in 3 voltages:
 - o 220-240V 50 Hz single phase
 - o 220-240V 60 Hz single phase
 - o 110-120V 50/60 Hz single phase

<u>Line protection</u>: the machine should be connected to a standard <u>2-pole + earth</u> electric socket. The system should be fitted with an RCD and a fuse rated at 16A. **The appliance must be earthed**

CARE:



- Before connecting the machine, check that the mains electrical voltage is the same as the voltage for your appliance. Its value is shown:
 - either on the identification plate under the machine.
 - > or on the identification plate on the last page of this manual.
- If the power cable is damaged, it should be replaced by a special assembly available from approved SANTOS dealers or from SANTOS.



USING FOR THE 1st TIME:

Take the precaution of carefully washing the drawer (1) and the disc (6) before using for the first time.

RECYCLING THE PRODUCT AT THE END OF ITS SERVICE LIFE



This equipment is marked with the selective sorting symbol relating to wastes from electrical and electronic equipment. It signifies that this product should be taken over by a selective collection system conforming to the Guideline 2002/96/EC (WEEE) – part Professional Equipment – so that it can be either recycled or dismantled in order to reduce any impact on the environment.

For more information, please contact your Retailer or the SANTOS.

For eliminating or recycling components of equipment, please contact a specialized company or contact SANTOS.

The electronic products not undergoing a selective sorting are potentially dangerous for the environment.

The damaging materials should be eliminated or recycled according to the regulations in force.



INTRODUCTION

Grater N°2

- Solidly built (cast aluminum and stainless steel sheet), equipped with an unbreakable food-quality plastic drawer, grater No. 2 is particularly suited for professional use: - Restaurants, Pizzerias, Cheese dairies, Supermarkets, Public Bodies.
- It has a powerful motor and a high output, stainless steel grating disc 110 mm in Ø; the average delivery of grated cheese is 50 kg/hr.
- Normally supplied with a disc with holes of Ø 3 mm for Gruyere, Grater no. 2 can be used with other discs on request:
 - o discs with holes of ø 2, ø 4, ø 6 or ø 8 mm.
 - o special discs for Parmesan and cheese for fondues.
- Grater no. 2 is also appropriate for grating almonds and hazelnuts or for making breadcrumbs.

Ice crusher N°9

- Designed in exactly the same way as Grater no. 2, Ice Crusher no. 9 only differs on the following points:
 - o specific disc with an adjustable knife to crush the ice cubes,
 - o stainless steel sheet at the bottom of the drawer.



USING THE MACHINE

USING (figure 1)

- 1. Prepare the pieces of cheese to be grated (or the ice cubes) beforehand.
- 2. Make sure the drawer is correctly in place (1) (operating is servo-controlled by a safety device linked to the drawer's presence). For the ice crusher: place the stainless steel sheet inside the drawer.
- 3. Start the machine by operating the On/Off button (5).
- 4. Lift up the lever (4), insert a piece of cheese to be grated (or ice cubes), and push on the lever steadily without forcing.
- 5. Repeat the above procedure as many times as necessary.
- 6. After use, stop the machine by operating the On/Off Button (5).

COMMENT: removing the drawer (1) or lifting up the chute (3) stops the appliance from working (figure 6).

For easier cleaning, do not leave food to dry in the drawer or on the grating disc.

CHANGING DISC

Push the end of the lever (4), pull on the closing key (14) and remove the chute + lever unit to get to the disc (6) (figure 2).

TAKING APART (left-handed thread): (figure 3)

• Clamp the disc (6) and undo the screw (7) following the arrow (clockwise) with the closing key (14).

REASSEMBLING: (figure 4)

- Check that the key (8) is present on the motor shaft.
- Check that the seal (13) is present on the disc (6).
- Place the disc on the motor shaft making the key match the key groove.
- Clamp the disc (6) and tighten the screw (7) following the arrow (anti-clockwise).

ADJUSTING THE ICE CRUSHER: (figure 5)

It is possible to adjust the position of the knife on the ice crusher disc by loosening the 2 fastening screws (9) fixing the knife (10) onto its support (11) and by moving it to increase or to reduce the cutting height of the knife into the ice cube.

Tighten the 2 screws (9) carefully after adjusting.

SAFE ACCESS TO THE TOOLS: (figure 6)



The appliance can only start if the lever (4) is not extending out of the chute to insert the food (3) and if the drawer catching the food (1) is correctly placed on the slideway (2).

Removing the drawer (1) causes the machine to stop. Re-starting the appliance requires specific operation of the On / Off switch (5) again (position 1).

A cut in the mains power supply results in the On / Off switch (5) stopping (position 0).

The fact of lifting the lever to add food into the chute (3) causes the motor to stop, without causing the appliance to stop completely.

Lowering the lever (4) allows the motor to be restarted.

MOTOR OVERLOAD SAFETY FEATURE:

Should the motor become blocked (foreign body, object that is too hard, too much pressure with the lever on the products being processed), the On / Off switch (5) automatically trips to the **0 position**.

Correct the problem and press the On / Off switch (5) (position 1).

If the problem persists, switch off the power supply to the machine (unplug the cord from the mains socket) and call in the maintenance service or contact a SANTOS approved dealer.

MAINTENANCE

Before carrying out any work on the appliance, it must in all cases be unplugged from the mains power supply and the motor start capacitor discharged:

Discharging the capacitor:

Use a screwdriver with insulated handle to touch the 2 connectors on the capacitor (12). The appearance of an electric arc shows that the capacitor has discharged.

Spare parts:

IMPORTANT: Use of spare parts other than certified original SANTOS parts is prohibited

This machine requires no specific maintenance. The bearings are lubricated for life. If work is required to replace worn parts such as start relay or the electric or other components, refer to the parts list (see exploded view at the end of the manual or which you can download from our website www.santos.fr).





For **all spare part orders** (see references in the exploded view at the end of the manual), state:

- > the type,
- > the machine serial number and
- > the electrical specifications recorded under the machine.

The complete disc (6) can be considered to be a part subject to wear.

For the machine to operate properly, it is recommended that a check is also made that the seal (13) is in good condition, in particular the absence of any signs of tearing of the lip.

CLEANING



The appliance should neither be cleaned in a jet of water nor with a high pressure spray.

- 1. Put the appliance on stop position by pushing the On/Off button and disconnect the plug.
- 2. Remove the chute + lever assembly and the grating disk.
- 3. Wash the chute + lever assembly, the grating disc and the drawer with washing-up detergent, rinse, dry and reassemble the unit.
- 4. The frame is to be sponged clean then dried. Polish from time to time with a non-abrasive product for windows or a cleaning agent for metal.



TROUBLESHOOTING

Identifying the cause of appliance stoppage precisely.

The appliance does not start: (figure 6)

- Check: the mains supply, the condition of the supply cord,
- Check: the position of the drawer (1) on its slideway (2), the position of the lever (4) (no more than 2 cm outside the chute (3)).

The appliance stops further to an overload:

See the chapter "motor overload safety feature"


MACHINE TECHNICAL SPECIFICATIONS


Mains power supply:				
Supply voltage (V)	220-240	110-120		
Frequency (Hz)	50 / 60	50 / 60		
Start capacitor (µF)	150µF -160V	250µF -160V		
Start relay (SANTOS reference)	02409 or 09409	02409B or 09409B		
	Motor:			
Power input (W)	600	650		
Power requirement (A)	3.5	4.5		
Motor speed (rpm)	1500 / 1800	1500 / 1800		
Noise (2)(dBA)	71	71		
Di	mensions and weigh	it		
Height (mm)	360			
Width (mm)	250			
Depth (mm)	420			
Net weight (kg)	14.5			
Packaged weight (kg)	15.5			
Drawer capacity (Liters)	1			


⁽¹⁾ These ratings are provided as a rough guide. The exact electrical specifications can be found on the rating plate.

⁽²⁾ Noise level measured with sound pressure appliance in operation 1 m from the machine's centerline in accordance with standards ISO 11201:1995 and ISO 4871:1996, on load. Appliance placed on a work surface 75cm above the ground. Microphone turned towards the appliance at 1.6 m from the floor and 1 m from the appliance.

SANTOS: Instruction and maintenance manual

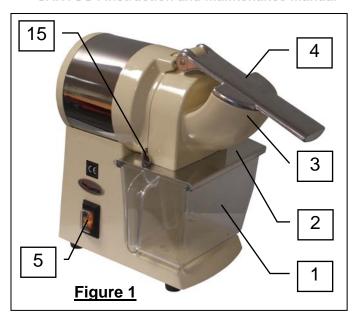

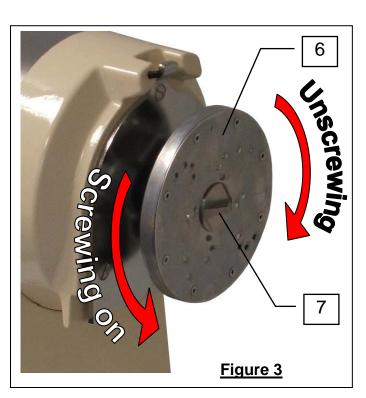


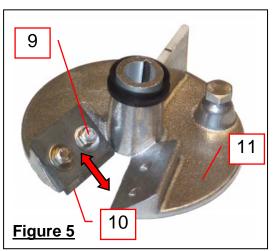









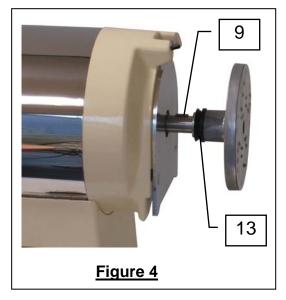

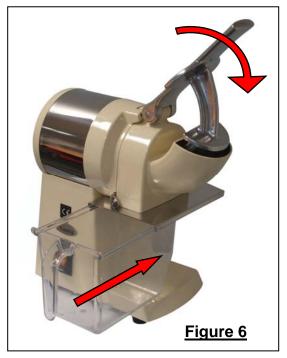





220-240V 50Hz wiring diagram

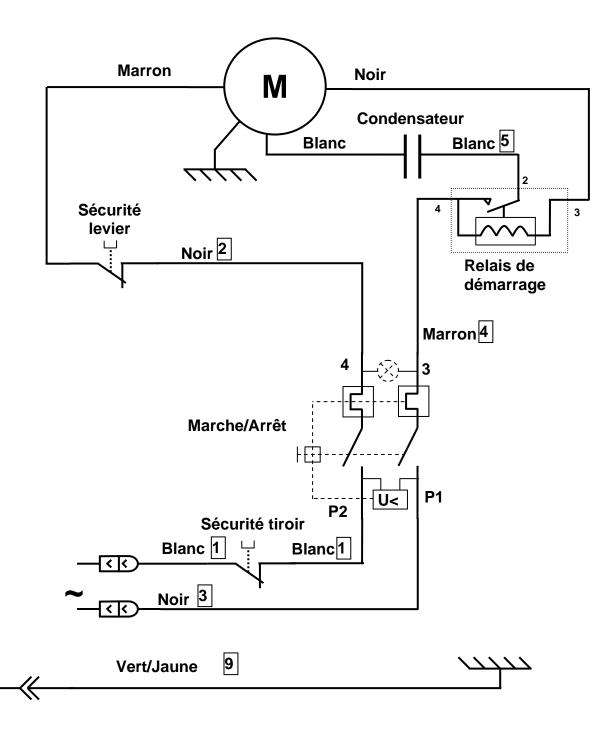




110-120V 50/60Hz wiring diagram

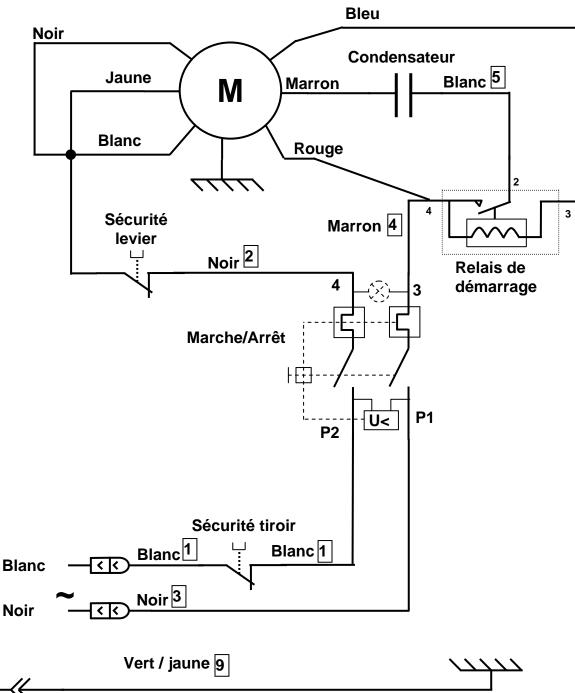

 



220-240V 60Hz wiring diagram

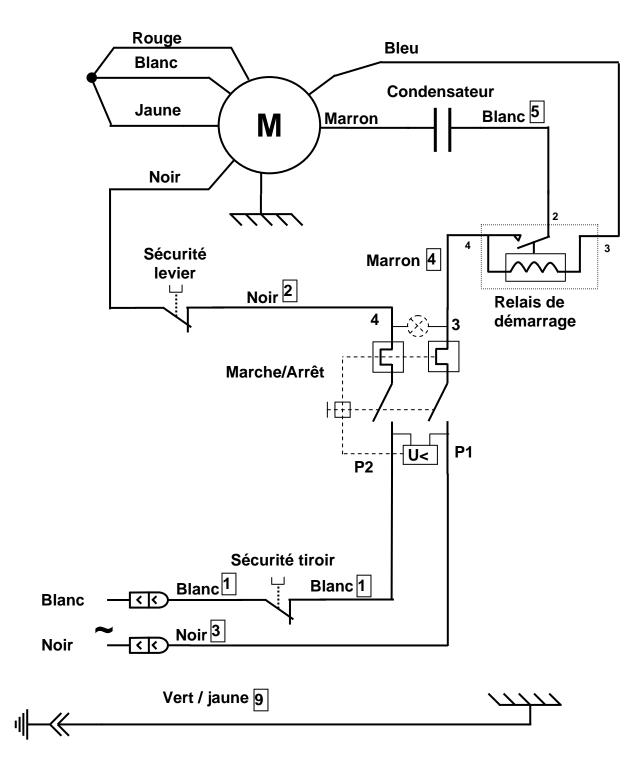



TRANSLATION CHART FOR ELECTRICAL COMPONENTS

F	GB
Condensateur	Capacitor
Protecteur thermique	Thermals cut-out
Relais de démarrage	Starter relay
Marche/Arrêt	On/Off Switch
Micro-interrupteur	Micro-Switch

TRANSLATION CHART FOR WIRE COLORS

F	GB
JAUNE	YELLOW
BLANC	WHITE
NOIR	BLACK
BLEU	BLUE
ROUGE	RED
MARRON	BROWN
ORANGE	ORANGE
VERT / JAUNE	GREEN / YELLOW

TRANSLATION CHART FOR COMPONENTS

	T
REP	Designation
1	Drawer to catch the food
2	Slideway to support drawer
3	Chute to insert the food
4	Lever
5	On-off switch
6	Complete disc
7	Locking screw for the disc
8	Key
9	Fastening screw for the ice crusher knife
10	Ice crusher knife
11	Ice crusher knife support
12	Capacitor
13	Seal
14	Closing key



WARRANTY CERTIFICATE

WARRANTY

This appliance is guaranteed for twelve months from the date of manufacture appearing on the identification plate.

The guarantee is strictly limited to the free replacement of any original part acknowledged by us as being defective as a result of a fault or a manufacturing defect and identified as belonging to the appliance in question.

It does nor apply to damage resulting from an installation or use which does not comply with the instructions supplied with each appliance (user manual) or in the event of an obvious lack of maintenance or non-observance of basic electrical safety rules.

All part replacements under warranty are made after return of the defective part to our workshops carriage paid, accompanied by a copy of this warranty certificate on which the serial number of the appliance is shown.

All appliances have an identification plate bearing a serial number identical to that on this warranty certificate.

In the event of serious damage which is deemed only to be repairable in our workshops, and after agreement from our services, all appliances under warranty are to be dispatched by the client carriage paid. If the appliance is repaired outside the warranty, the forwarding and return transport is the responsibility of the client. Parts and labour are invoiced at the prices in force (spare parts price - hourly labour cost). All repairs will be subject to a prior estimate which should be agreed before repair.

In the event of a dispute, the Courts for the manufacturer's area (Lyon) alone have jurisdiction.

APPLIANCE IDENTIFICATION PLATE

SPECIMEN

For all documents not supplied with the appliance.

Printed, Faxed and Downloaded