

Food Heat Lamp Model TOSCA

Order no. 317-2040



*Please read and keep
the instruction*



in door use only.



Don't discard

OPERATING INSTRUCTIONS



CAUTION: Read the instructions before using the appliance.

INTRODUCTION

1. Please read instructions before using this appliance.
2. When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury.
3. Clean machine thoroughly before and after each use following the cleaning instructions provided below.

ELECTRICAL REQUIREMENTS

Plug warmer into a grounded outlet with correct voltage and sufficient power capacity. Refer to the product label (serial plate) on the warmer for voltage and wattage requirements.

SAFETY INSTRUCTIONS

1. **Warning!** All power must be disconnected at power source before any service procedure is performed.
2. This appliance is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as drapes and other furnishings, away from appliance.
3. Extreme caution is necessary when any appliance is used by or near children and whenever the appliance is left unattended.
4. Always unplug appliance when not in use and before cleaning, adjusting or maintaining this machine. To disconnect appliance, turn switch off and remove plug from power source.
5. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, has been dropped, or damaged. Return appliance to an authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. Do not use outdoors. This appliance is not intended for wet or moist locations. Never locate appliance where it may fall into water.
7. Connect to properly grounded outlets only. Avoid the use of extension cords. Do not run cord under carpeting, runners, or the like. Arrange cord away from traffic area and where it will not create a trip hazard.
8. This appliance is equipped with a power cord with a three-blade plug. Plug **ONLY** into a matching three-blade outlet. **DO NOT** cut or break off the third blade or attempt to use with a two-blade extension cord.
9. To prevent a possible fire, it is recommended that the unit is placed on a non-combustible surface.
10. This appliance has electrical parts. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.

saro® Operating Instructions Food Heat Lamp Model TOSCA

WARNING!



This unit only suitable for R40 or BR40 type incandescent lamp.
Halogen Lamp is excluded from the warranty & insurance.





Per clause of Sanitation, please always use & replaced lamps with plastic coated or resist shattering treated.



For safe and proper operation, do not install a bulb beyond 250W watt into the unit.

PREPARTION

1. Set the unit on a flat surface.
2. Insert the Supporter Arm into the Stand.
3. Adjust the Supporter to appropriate height and Insert the screw to fix the height.
4. Install bulbs with the appropriate wattage rating as indicated on the warmer.
5. **Per clause of Sanitation, after the height is fixed, be sure to stuff the rubbers plugs to clog up the threaded holes which exposed.**

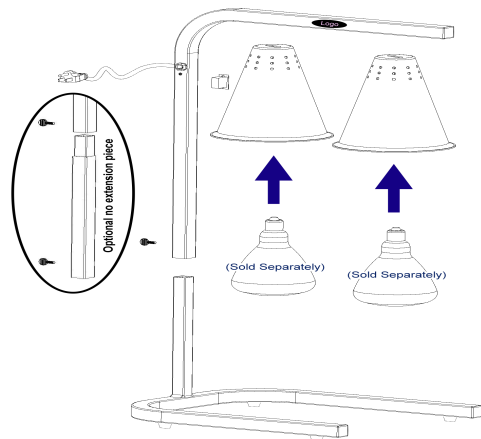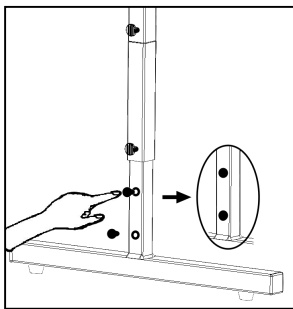

OPERATION

1. Plug cord into grounded electrical outlet of the correct voltage. Electrical shock can occur if appliance is not grounded.
2. Place food products in a pan, located directly under the bulbs for best results.
3. Turn unit off when not in use.
4. To disconnect appliance, turn switch off and remove plug from power source.



Caution; Hot Surface.

CLEANING

NOTE: Proper maintenance plays an important part in the life span and functioning of the warmer.

1. Unplug the cord and let warmer cool before cleaning or moving.
2. This unit can be cleaned with a damp sponge and mild soap. Rinse with clean water and wipe dry.
3. **Do not immerse in water or other liquid.** Do not clean with a water jet.



The kettle must not be cleaned by a water jet.

MAINTENANCE

HEAT BULB REPLACEMENT

NOTE: Each standard Heat Lamp is suitable with clear or infrared heat bulb rated or below at 250 watts.

1. To replace a bulb, place the switch in the OFF position and allow the bulb to cool completely.
2. Bulbs have a threaded base, Unscrew the bulb counterclockwise from the unit and replace with a new bulb.