

INSTRUCTIONS FOR THE RICE COOKER



*Please read and keep
the instruction.*



in door use only.



*Don't be disposed
of household refuse.*

Model No: S160

Specification: Capacity : 23 cup, 4.2 Litre
Voltage : 220 - 240V ~
Wattage : 1465 - 1742W
Weight : 5 Kg
Dimension: 29cm High 42 cm Dia.




CAUTION: Read the instructions before using the appliance.

Guidelines for safe use

- The rice cooker must be placed in a horizontal position.
- The rice cooker is only suitable for indoor use, under room temperature around 25 °C.
- Do not disconnect the appliance and pull the supply cord with wet hands.
- If the supply cord is damaged, please stop for using.
- Always attach the electric cord to the appliance before plugging into the wall outlet. Unplug from outlet when not in use.
- Always unplug the appliance and allow cooling before cleaning.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Any intent for the cord to be replaced must to be replaced by the manufacturer, its service agents or similarly qualified person in order to avoid a hazard.
- Never load rice with water beyond the limit mark of 23 cup or 4.2 L in the pot.
- Please do not put the appliance and pot into refrigerator or environment may cause freeze. In case, the appliance must be placed in the room temperature until it restores to the normal condition and make sure there is no sweat on the unit when reuse it.
- DO NOT OPERATE COOKER WHILE IT IS EMPTY.

Please check the following items are enclosed before using:

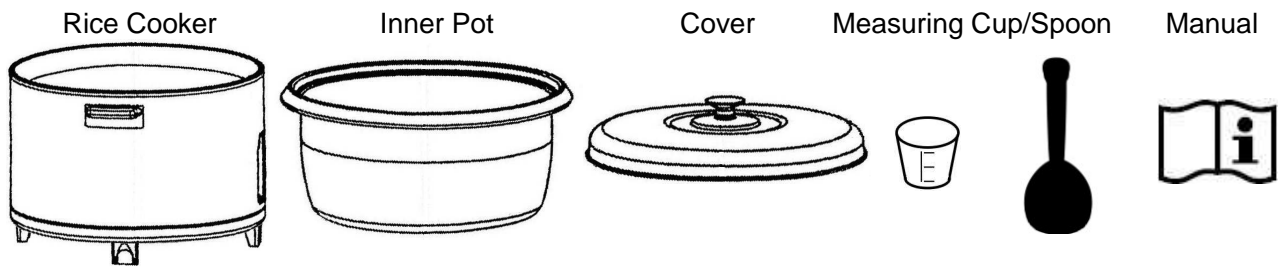

OPERATE:

1. Plug the unit into the correct electrical socket and make sure it is with earthed well.
2. Use the measuring cup to provide the desired quantity of rice. As a guide, one cup of rice is sufficient for one person.
3. Thoroughly rinse the rice in several times of water and drain, failure to do this action may affect the quality of the cooked rice and cause a build up of steam.
4. Put the rice in the inner pot. Add water to the corresponding level marked on the pot i.e. for 4 cups of rice fill the water up to level 4.
5. Put the inner pot into the rice cooker. Please ensure there is no rice outside of the pot and the pot must be dry
6. Cover with lid.
7. Plug the unit and the switch on, the “keep warm” function will start to operate.
8. Press the switch button and the “rice cooking” light will turn on that indicates the rice is cooking.
9. When the rice is complete to cook, the unit will switch to the “keep Warm” function automatically.
10. Leave the lid for 10 minutes as the unit is finished to cook the rice by steaming.
11. Remove the lid and stir the rice. It is now ready to eat. To consume the stirred rice within one hour.
12. If the rice is to be left for a long time period, it should be left and only stirred before serving. The keep warm period should not exceed 2 hours.
13. After using, turn the switch OFF and remove plug from power outlet.

Other Points to note

- Allow the machine to function correctly; do not switch the unit back to the cooking setting immediately.
- Always use heat resistant gloves when remove the inner pot from the unit.
- Certain kinds of rice may cause a build up of steam within the unit. When this situation occurs, simply lift the lid to allow the steam to escape.
- Do not reheat cooked rice in the rice cooker.
- Do not lift the lid during the keep warm period.
- Do not use sharp objects inside the pot as this may damage the nonstick coating.
- Ensure unit is unplugged when not in use, when filling and when being cleaned.
- The appliance must not be cleaned by a water jet.



DO NOT USE THE INNER POT FOR OTHER USAGE!


If the Inner aluminium Pot is damaged or it is not placed well on/in cookers, it may cause safety thermostat reaction.

For prolong the usage life of appliance and ensure it always operates well, the Inner Pot of Rice Cooker cannot allow for other usage, for example, burn on the oven, scrub by metal tools or scourers, or put the pot in the refrigerator etc.

To rinse the rice before cooking, we suggest using other container to do it first and then move the washed rice into the Inner Pot.



In case, if the thermostat reaction causes overheated; user must press down and click the thermostat before next operation.

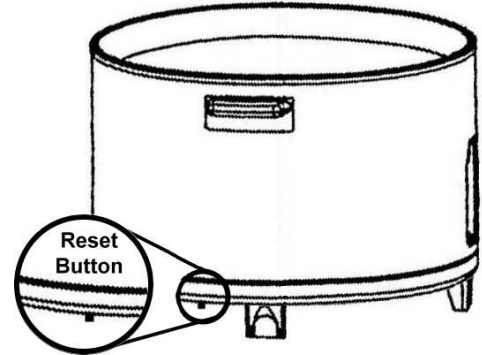

IMPORTANT REMIND

NEVER IMMERSE UNIT IN WATER AS DAMAGE TO THE UNIT WILL RESULT AND THE GUARANTEE WILL BE INVALID.

THIS APPLIANCE MUST BE EARTHED.

DO NOT OPERATE COOKER WHILE IT IS EMPTY.

NEVER WASH IT BY WATER JET.

CHILDREN ARE NOT ALLOWED TO OPERATE FOR THIS APPLIANCE.

THE STEAM MAY CAUSE INJURES, PLEASE PAY ATTENTION NOT TO APPROACH AND PLEASE OPEN THE LID WITH HEAT RESISTANT GLOVES.

MAINTENANCE:

- Ensure the unit is unplugged and cool before cleaning.
- DO NOT IMMERSE THE UNIT IN WATER AT ANY TIME.
- Spilled food must be cleaned up immediately from external surfaces.
- The external painting and top collar should be wiped over with a damp soapy cloth only.
- Ensure unit is unplugged when not in use, during filling and when being cleaned.
- The unit must have to clear daily.
- Never wash it by water jet.
- Clean the outside with a damp cloth
- Clean the inner pot with hot soapy water and a soft brush.
- Do not use any metal tools or scourers, the non-stick coating may scrape.
- Harsh cleaning chemicals may damage the appearance and performance of this unit.



The appliance must not be cleaned by a water jet.



Caution: Hot Surface

How to Clean

1. Wash the inner pot with warm and soapy water by using a sponge or dishcloth. Rinse and dry thoroughly.
2. Keep the cooking pot scrupulously clean especially if salt or salty ingredients have been used. Salt is very corrosive and will damage the lining.
3. Detach the inner lid, soak briefly and wash clean.
4. Clean other surfaces with a damp cloth.
5. Do not immerse the rice cooker in liquid.
6. Do not use any abrasive cleanser to clean the non-stick surface.
7. Do not clean the rice cooker while still hot.

Limited Warranty

The warrants this product free from defect in material and workmanship for 6 months from provable date of purchase.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.



This appliance is not intended for using by person (including children) with reduced physical, sensory or mental capabilities or experience and knowledge, unless they have been given a supervision or instruction condemning use or the appliance by a person responsible for their safety.



If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarity qualified person in order to avoid a hazard.



This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm house; hotels, motels and other residential accommodation type environments.

Contact us

If you have any questions or need some advices, please contact us at the address below or display at the data plate of machine: