


Installation Instructions **Room Service Trolley** Model AF 260 Order no. 399-1018



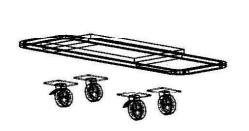

1. Wheels are installed on bottom 2. Left/right side boards are plate with screws.

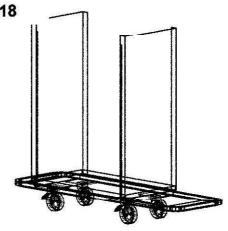



3. Upper/lower shelves are fixed between Left/right side boards with screws.



4. Back plate is fixed between the bottom plate and shelves with screws.



5. Upper tray is mounted on top of the side boards and back plate.



6, handrails and upper tray are fixed on the side boards with screws.