



POST ASSEMBLY:

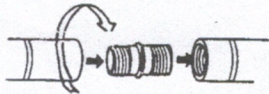

- STEP 1) ALL FOUR POST ARE IN TWO SECTIONS, AND MUST BE SCREWED TOGETHER USING THE THREADED POST JOINER WHICH SHOULD ALREADY BE SCREWED INTO ONE OF THE POST HALVES. THE TOP POST SECTION HAS A PLASTIC TOP CAP AT ONE END AND THE BOTTOM POST WILL HAVE A FOOT LEVELER ATTACHED. SCREW TOGETHER THE POST SECTIONS IN A CLOCKWISE DIRECTION (TURNING RIGHT) UNTIL THERE IS A HAND TIGHT SNUG FIT. IF THE POSTS DO NOT SCREW TOGETHER EASILY, THE THREADS ARE NOT PROPERLY LINED UP.

BOTTOM SHELF ASSEMBLY:

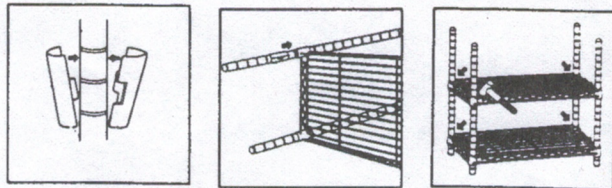


- STEP 2) AT THE DESIRED HEIGHT OF THE BOTTOM SHELF, SNAP THE TAPERED PLASTIC LOCKS INTO THE POST GROOVE. PLASTIC LOCKS MUST BE SNAPPED TOGETHER WITH THE SMALL TAPERED SIDE FACING UP, AND MAY BE ADJUSTED AT 1" INCREMENTS. EACH TAPERED LOCK SHOULD HAVE THE THICKER END FACING DOWN. IT IS RECOMMENDED THAT THE BOTTOM SHELF SHOULD NOT BE MORE THAN 6" OFF THE GROUND.
- STEP 3) HOLD THE SHELF ON ITS SIDE AND SLIDE THE TOP OF THE FOUR POSTS THROUGH THE BOTTOM OF THE SHELF AT ITS CORNERS UNTIL THERE IS A SNUG FIT.
- STEP 4) AFTER THE FOUR POSTS HAVE BEEN SLID THROUGH THE SHELF CORNER HOLES, SET THE SHELF UPRIGHT. PUSHING FIRMLY DOWN ON THE SHELF AT THE CORNERS WILL SECURE THE SHELF IN PLACE OVER THE PLASTIC LOCKS.

COMPLETING ASSEMBLY:

- STEP 5) SNAP THE PLASTIC LOCKS INTO PLACE AT YOUR NEXT DESIRED SHELF HEIGHT. SLIDE THE SHELF DOWN FROM THE TOP OF THE POSTS ONTO THE PLASTIC LOCKS AND AGAIN PUSH FIRMLY.
- STEP 6) REPEAT STEP 5 FOR THE REMAINING SHELVES. IT IS RECOMMENDED THAT THE TOP SHELF BE LINED UP IN THE TOP POST GROOVE.
- STEP 7) SCREW THE FOOT LEVELERS IN OR OUT AT THE BOTTOM OF THE POSTS TO ATTAIN PROPER LEVELING.

STORE-SHELF
IS NOW COMPLETELY ASSEMBLED.

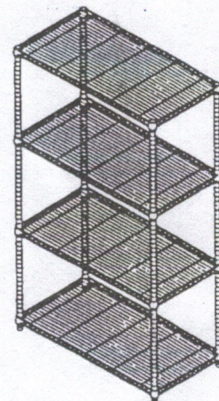

USING A RUBBER Mallet CAN MAKE INSTALLATION EASIER—USE CAUTION NOT TO DAMAGE THE UNIT.